

MineralFloor Installation Ideas



Installation 01



Installation 02



Installation 03



Installation 04



Installation 05





Installation 06



Installation 07

MineralFloor Installation Keys

Installation 01

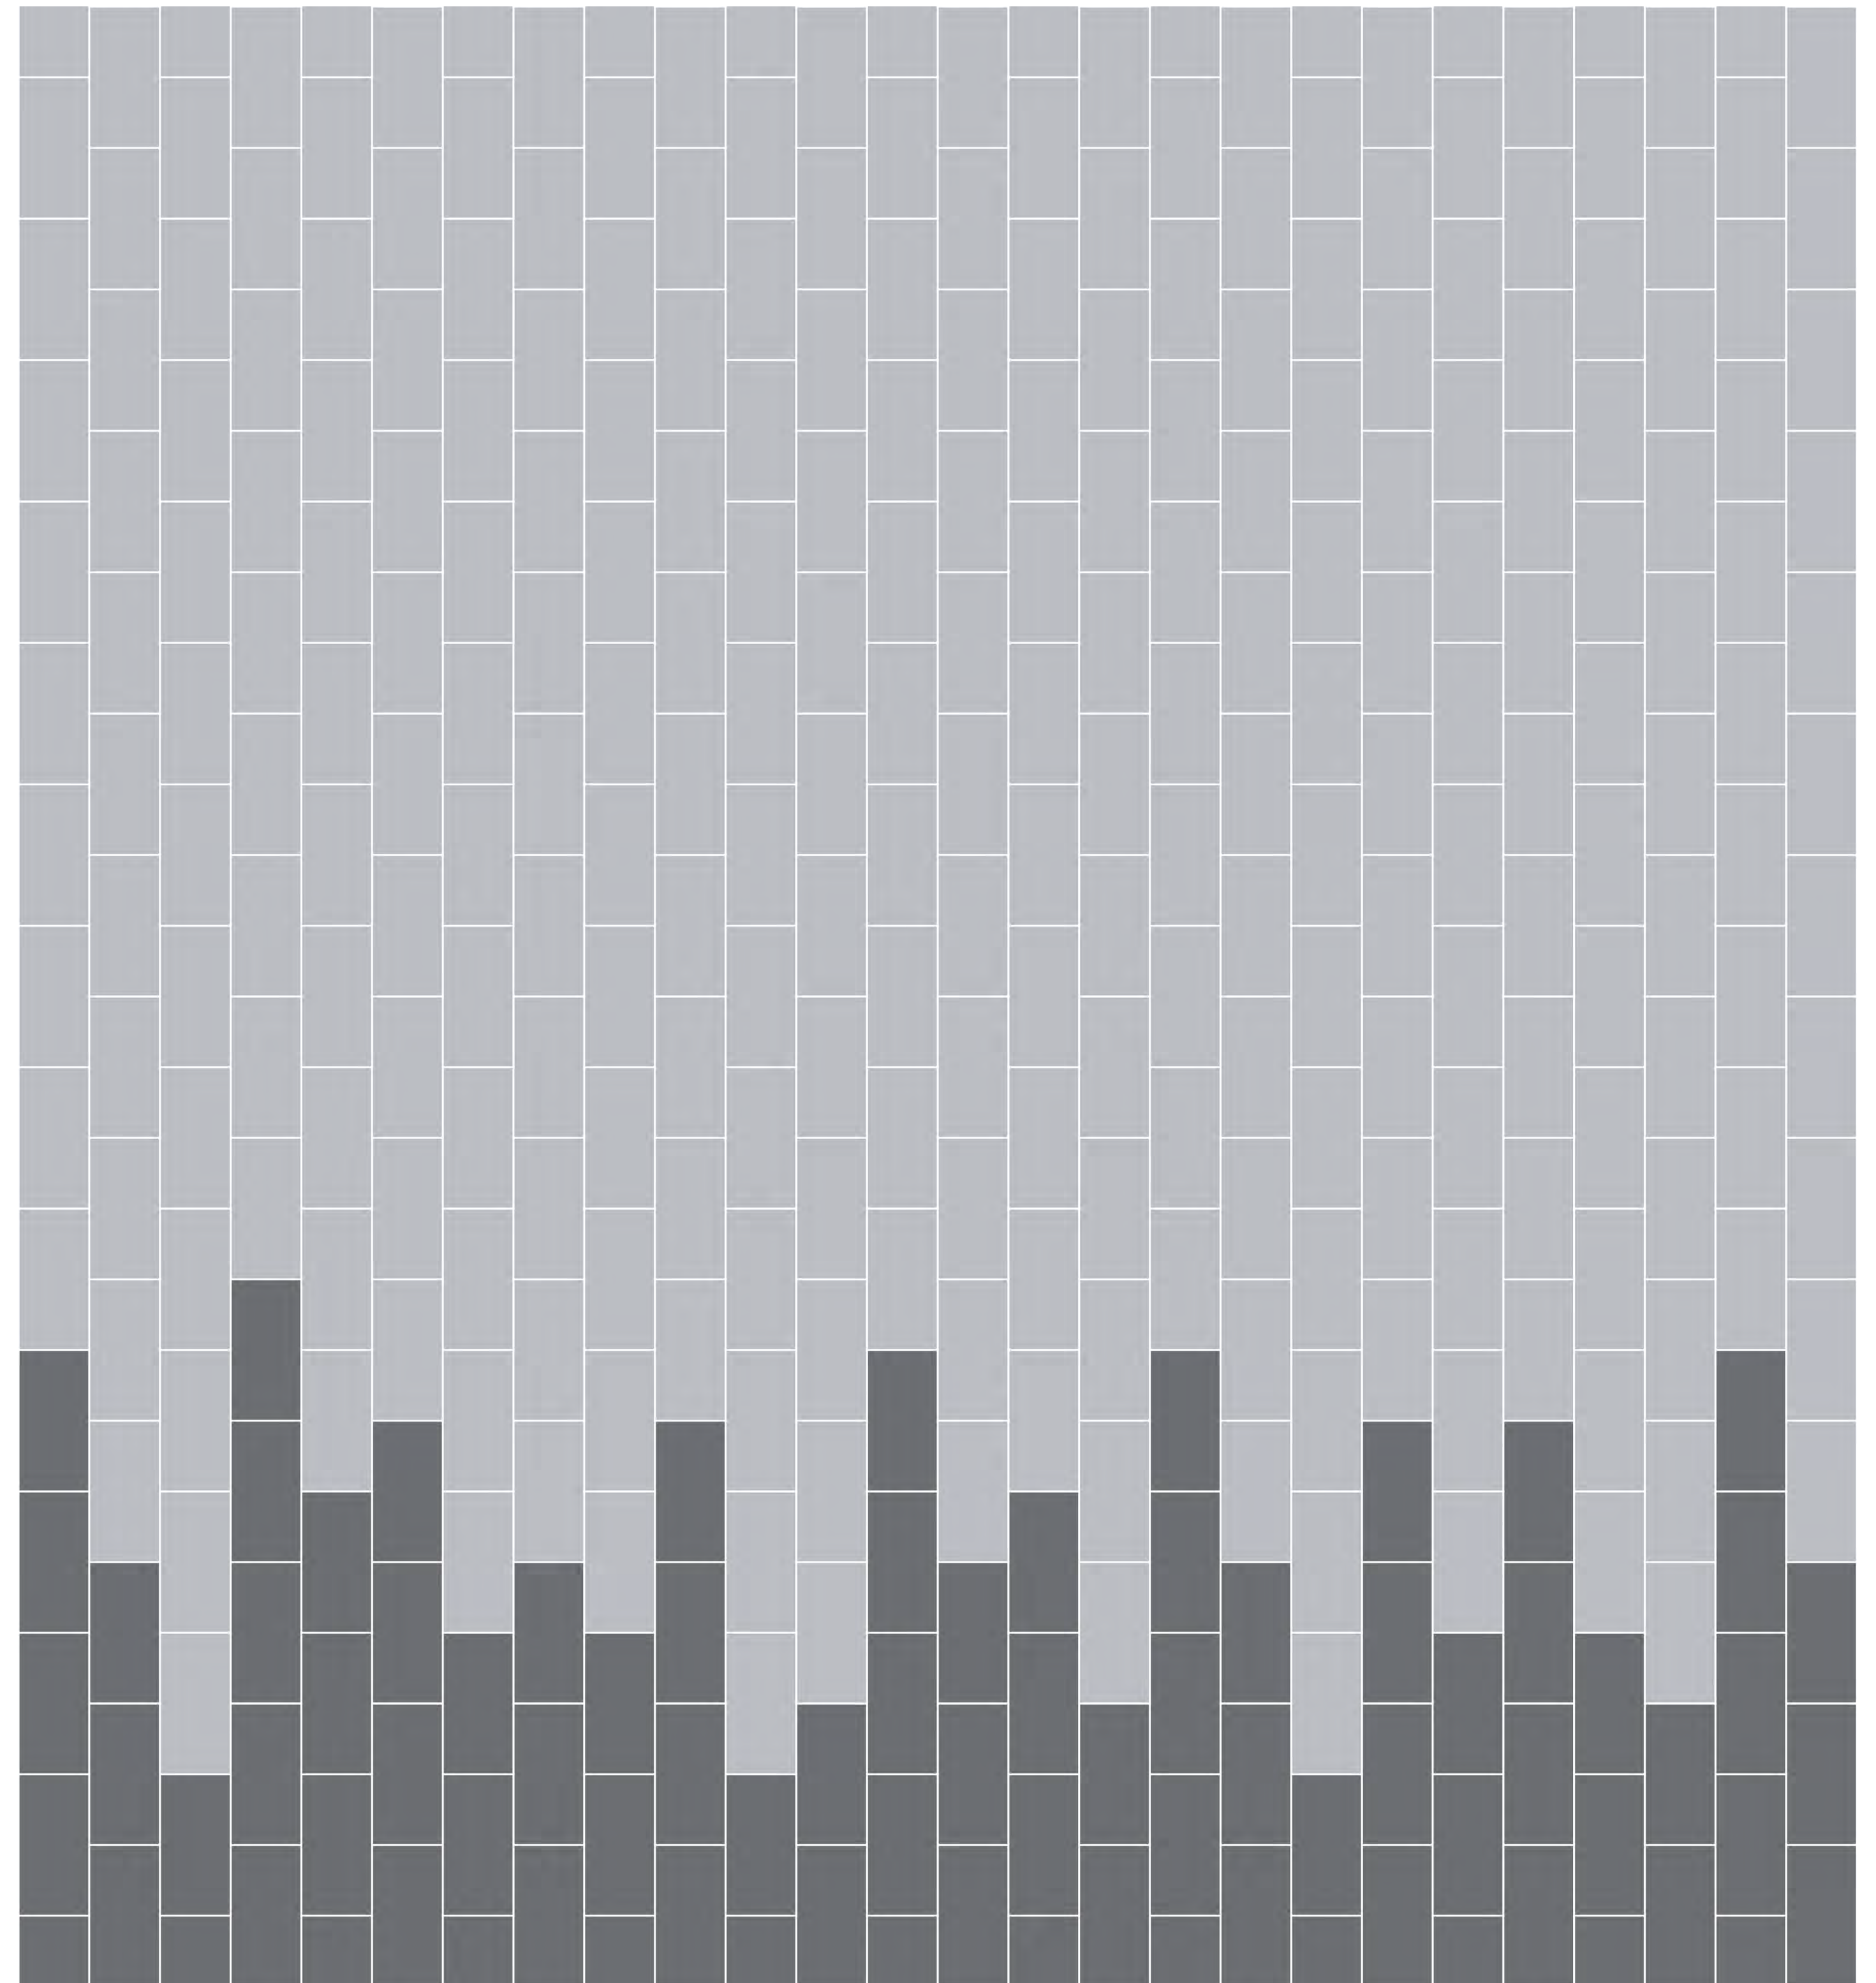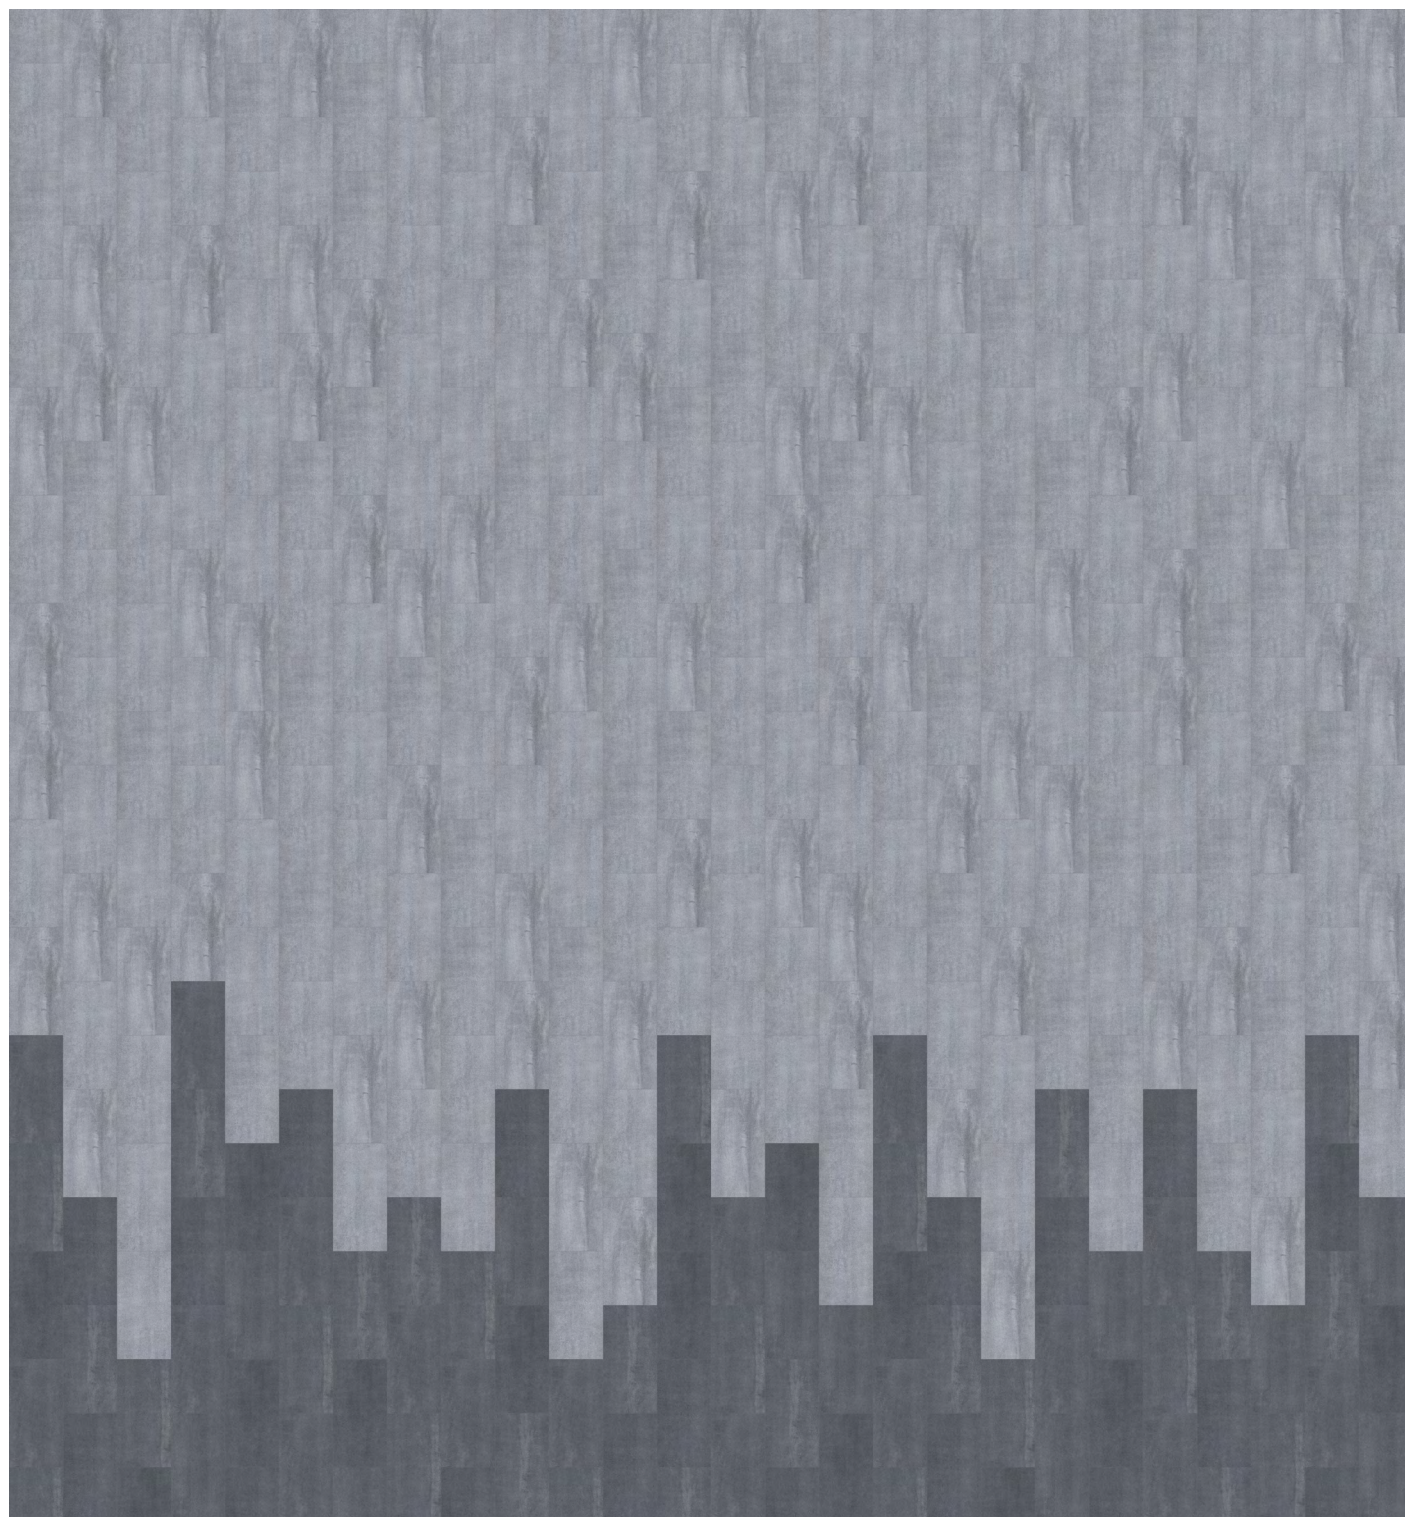


■ Basis Rigid Mineral Core (4339V) in Matrix (39585)

■ Basis Rigid Mineral Core (4339V) in Intrinsic (39520)

Installation 02




- Origin Rigid Mineral Core (4338V) in Composition (38720)
- Origin Rigid Mineral Core (4338V) in Prelude (38710)
- Origin Rigid Mineral Core (4338V) in Initiate (38130)

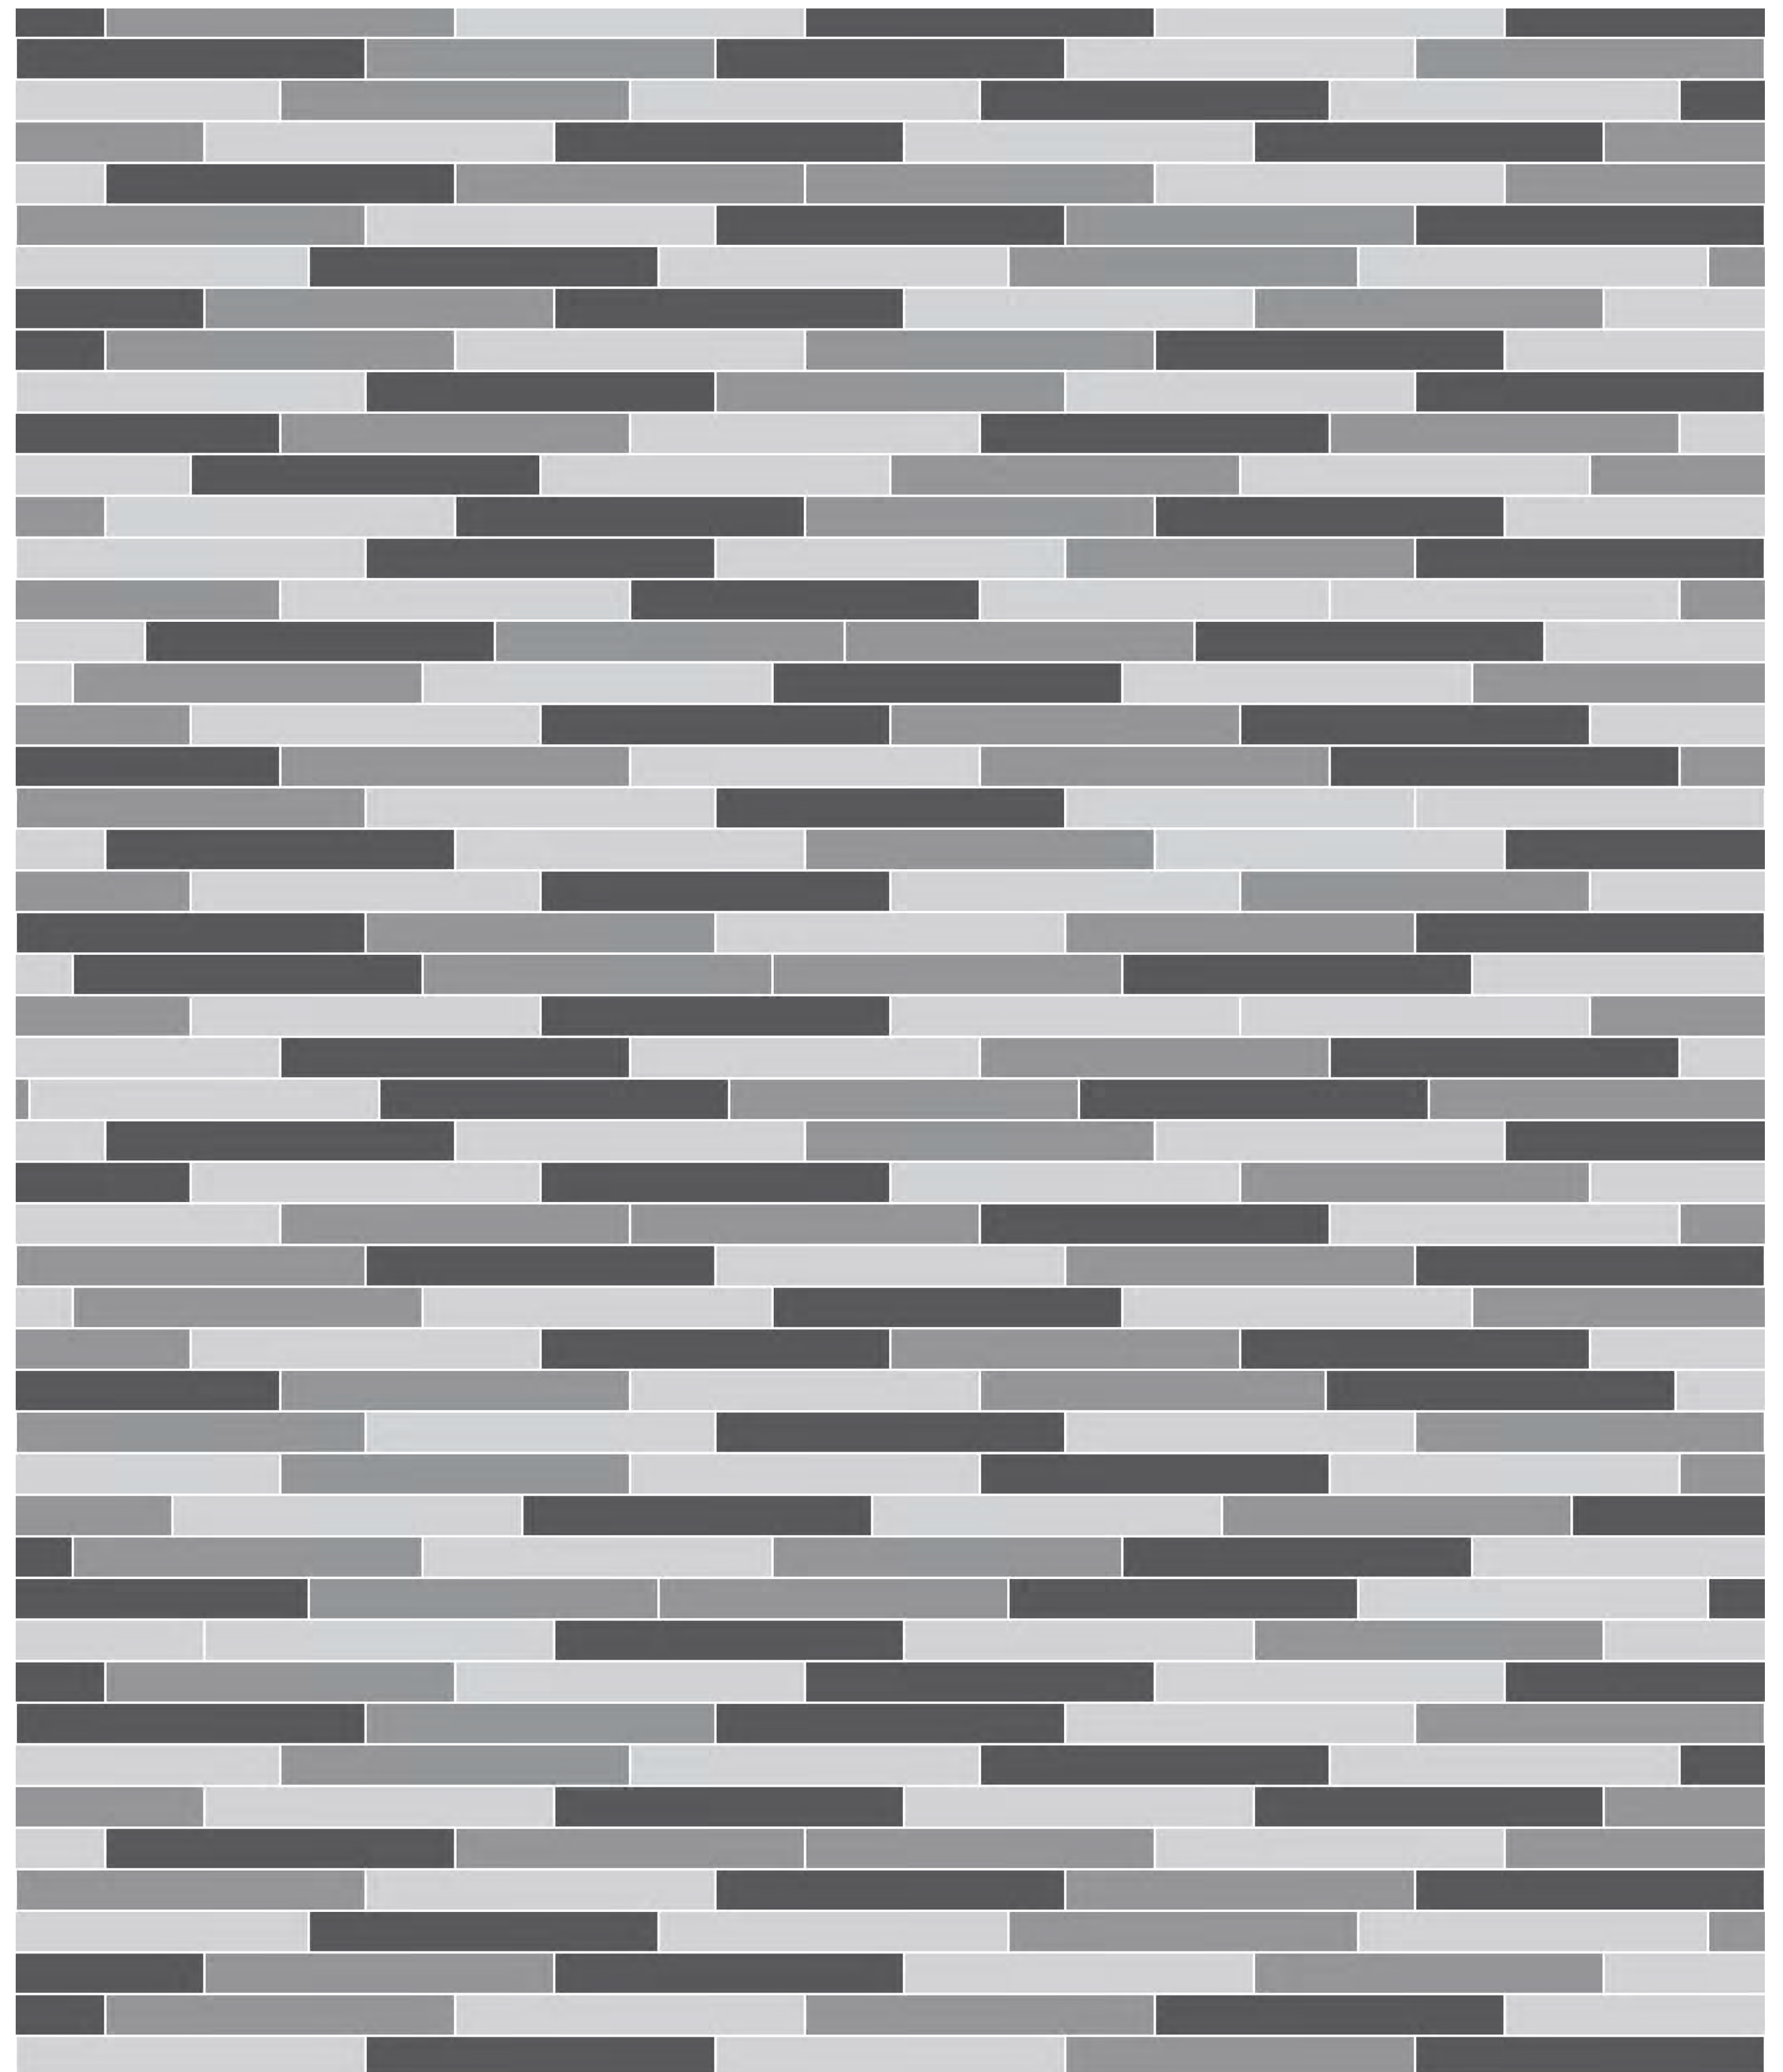

Installation 03




- Basis Rigid Mineral Core (4339V) in Matrix (39585)
- Basis Rigid Mineral Core (4339V) in Intrinsic (39520)
- Basis Rigid Mineral Core (4339V) in Elaborate (39504)

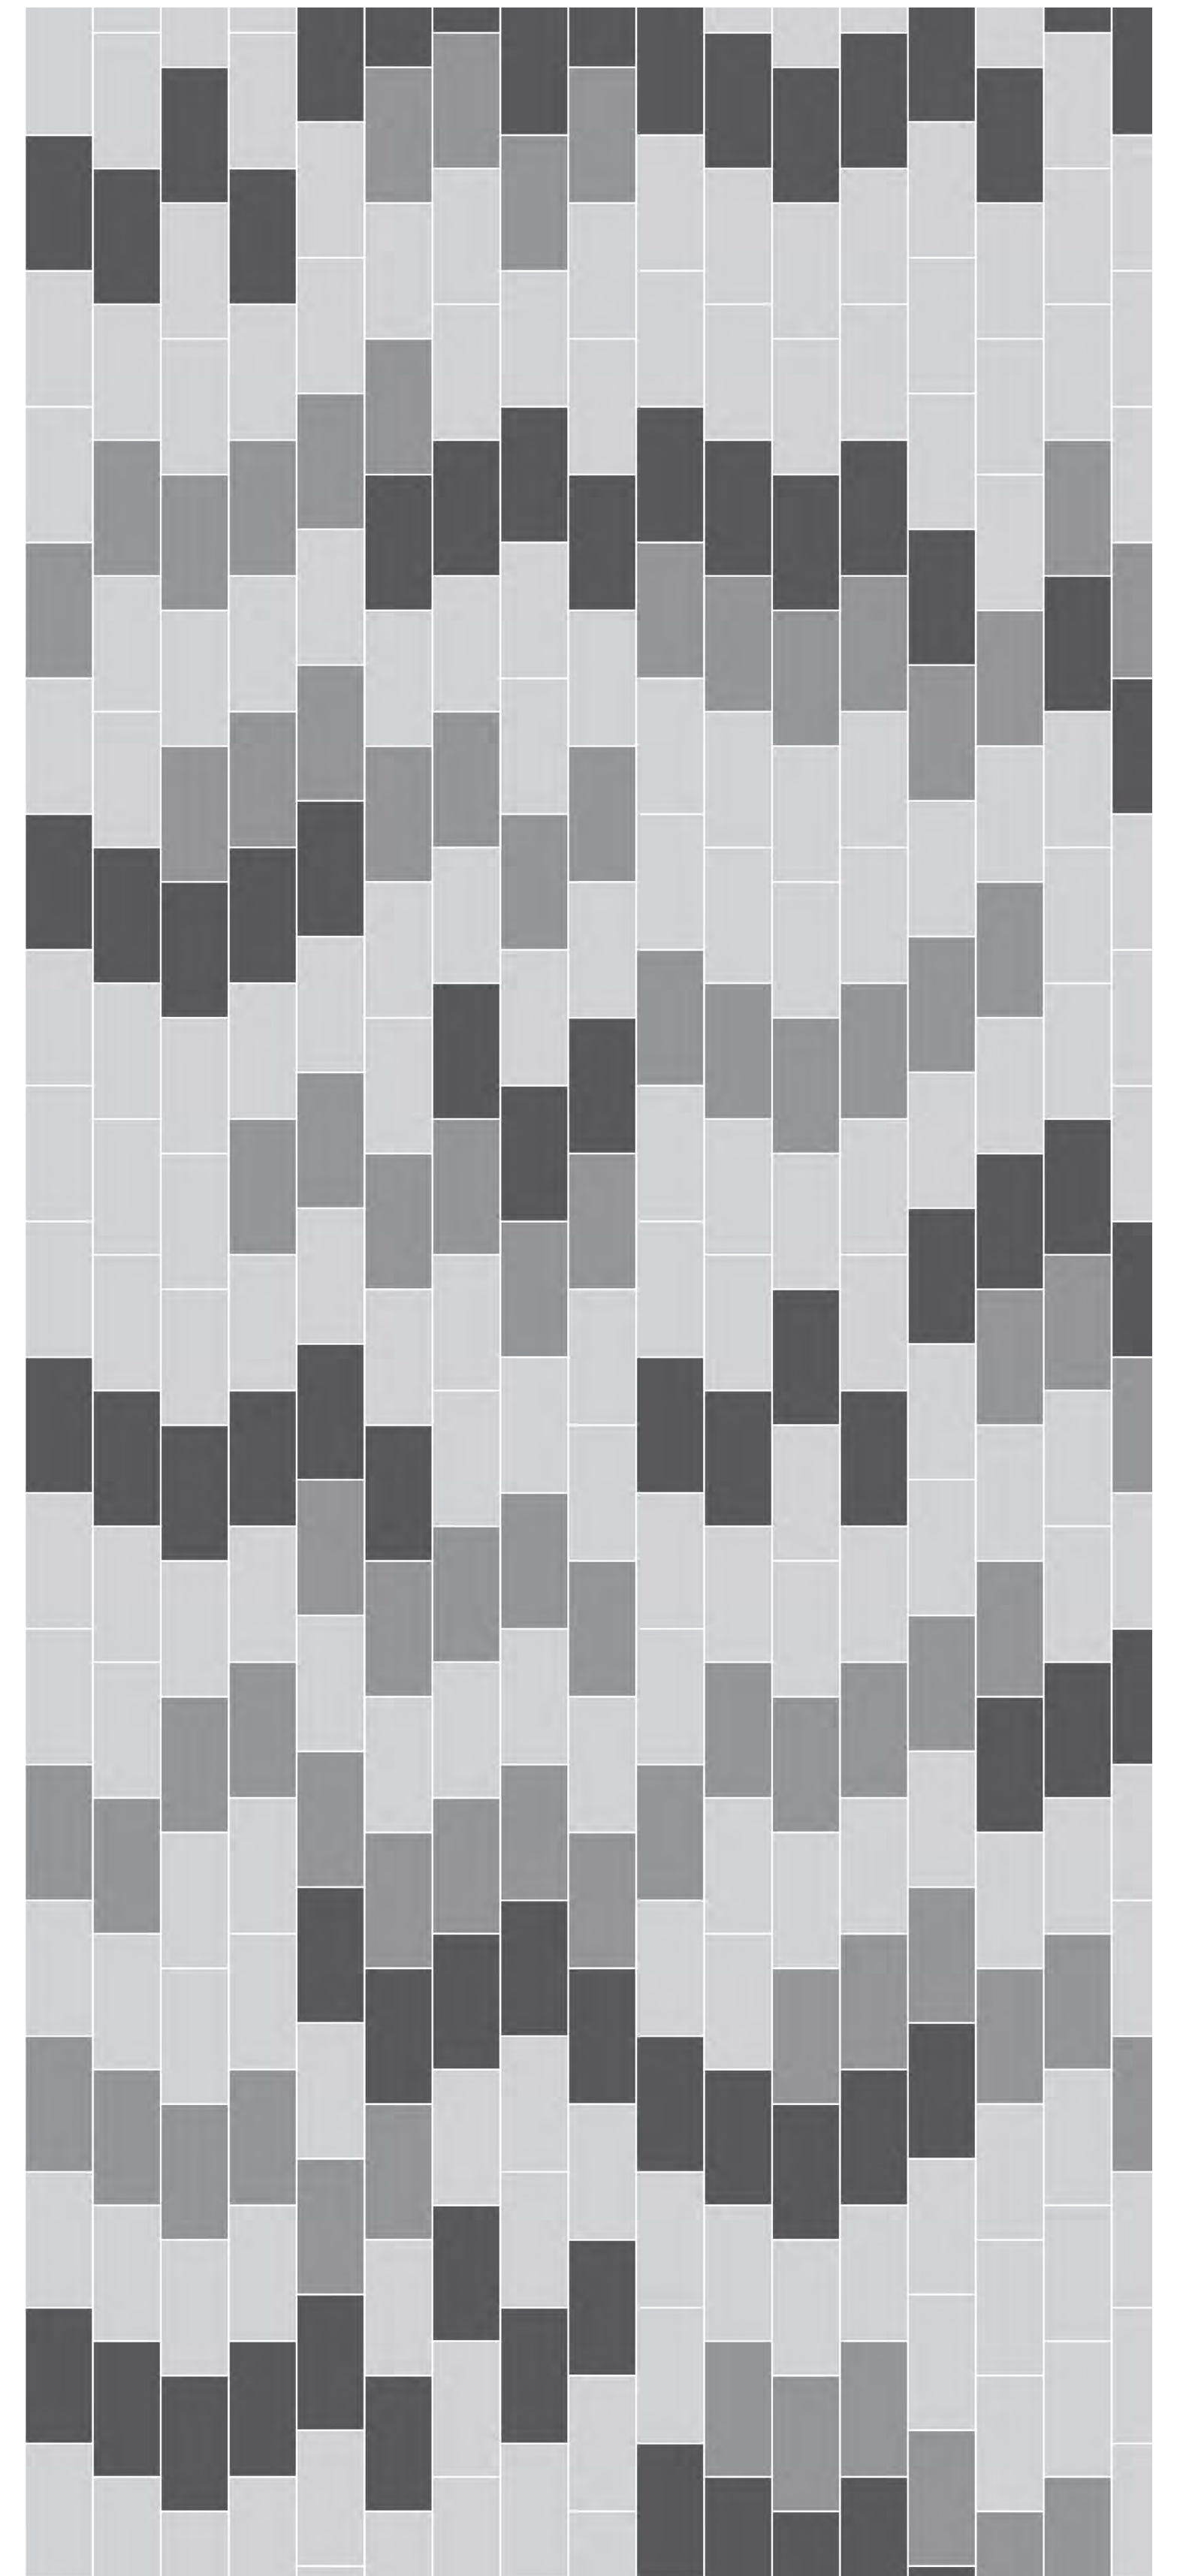


Installation 04



- Origin Rigid Mineral Core (4338V) in Overture (38760)
- Origin Rigid Mineral Core (4338V) in Prelude (38710)
- Origin Rigid Mineral Core (4338V) in Initiate (38130)


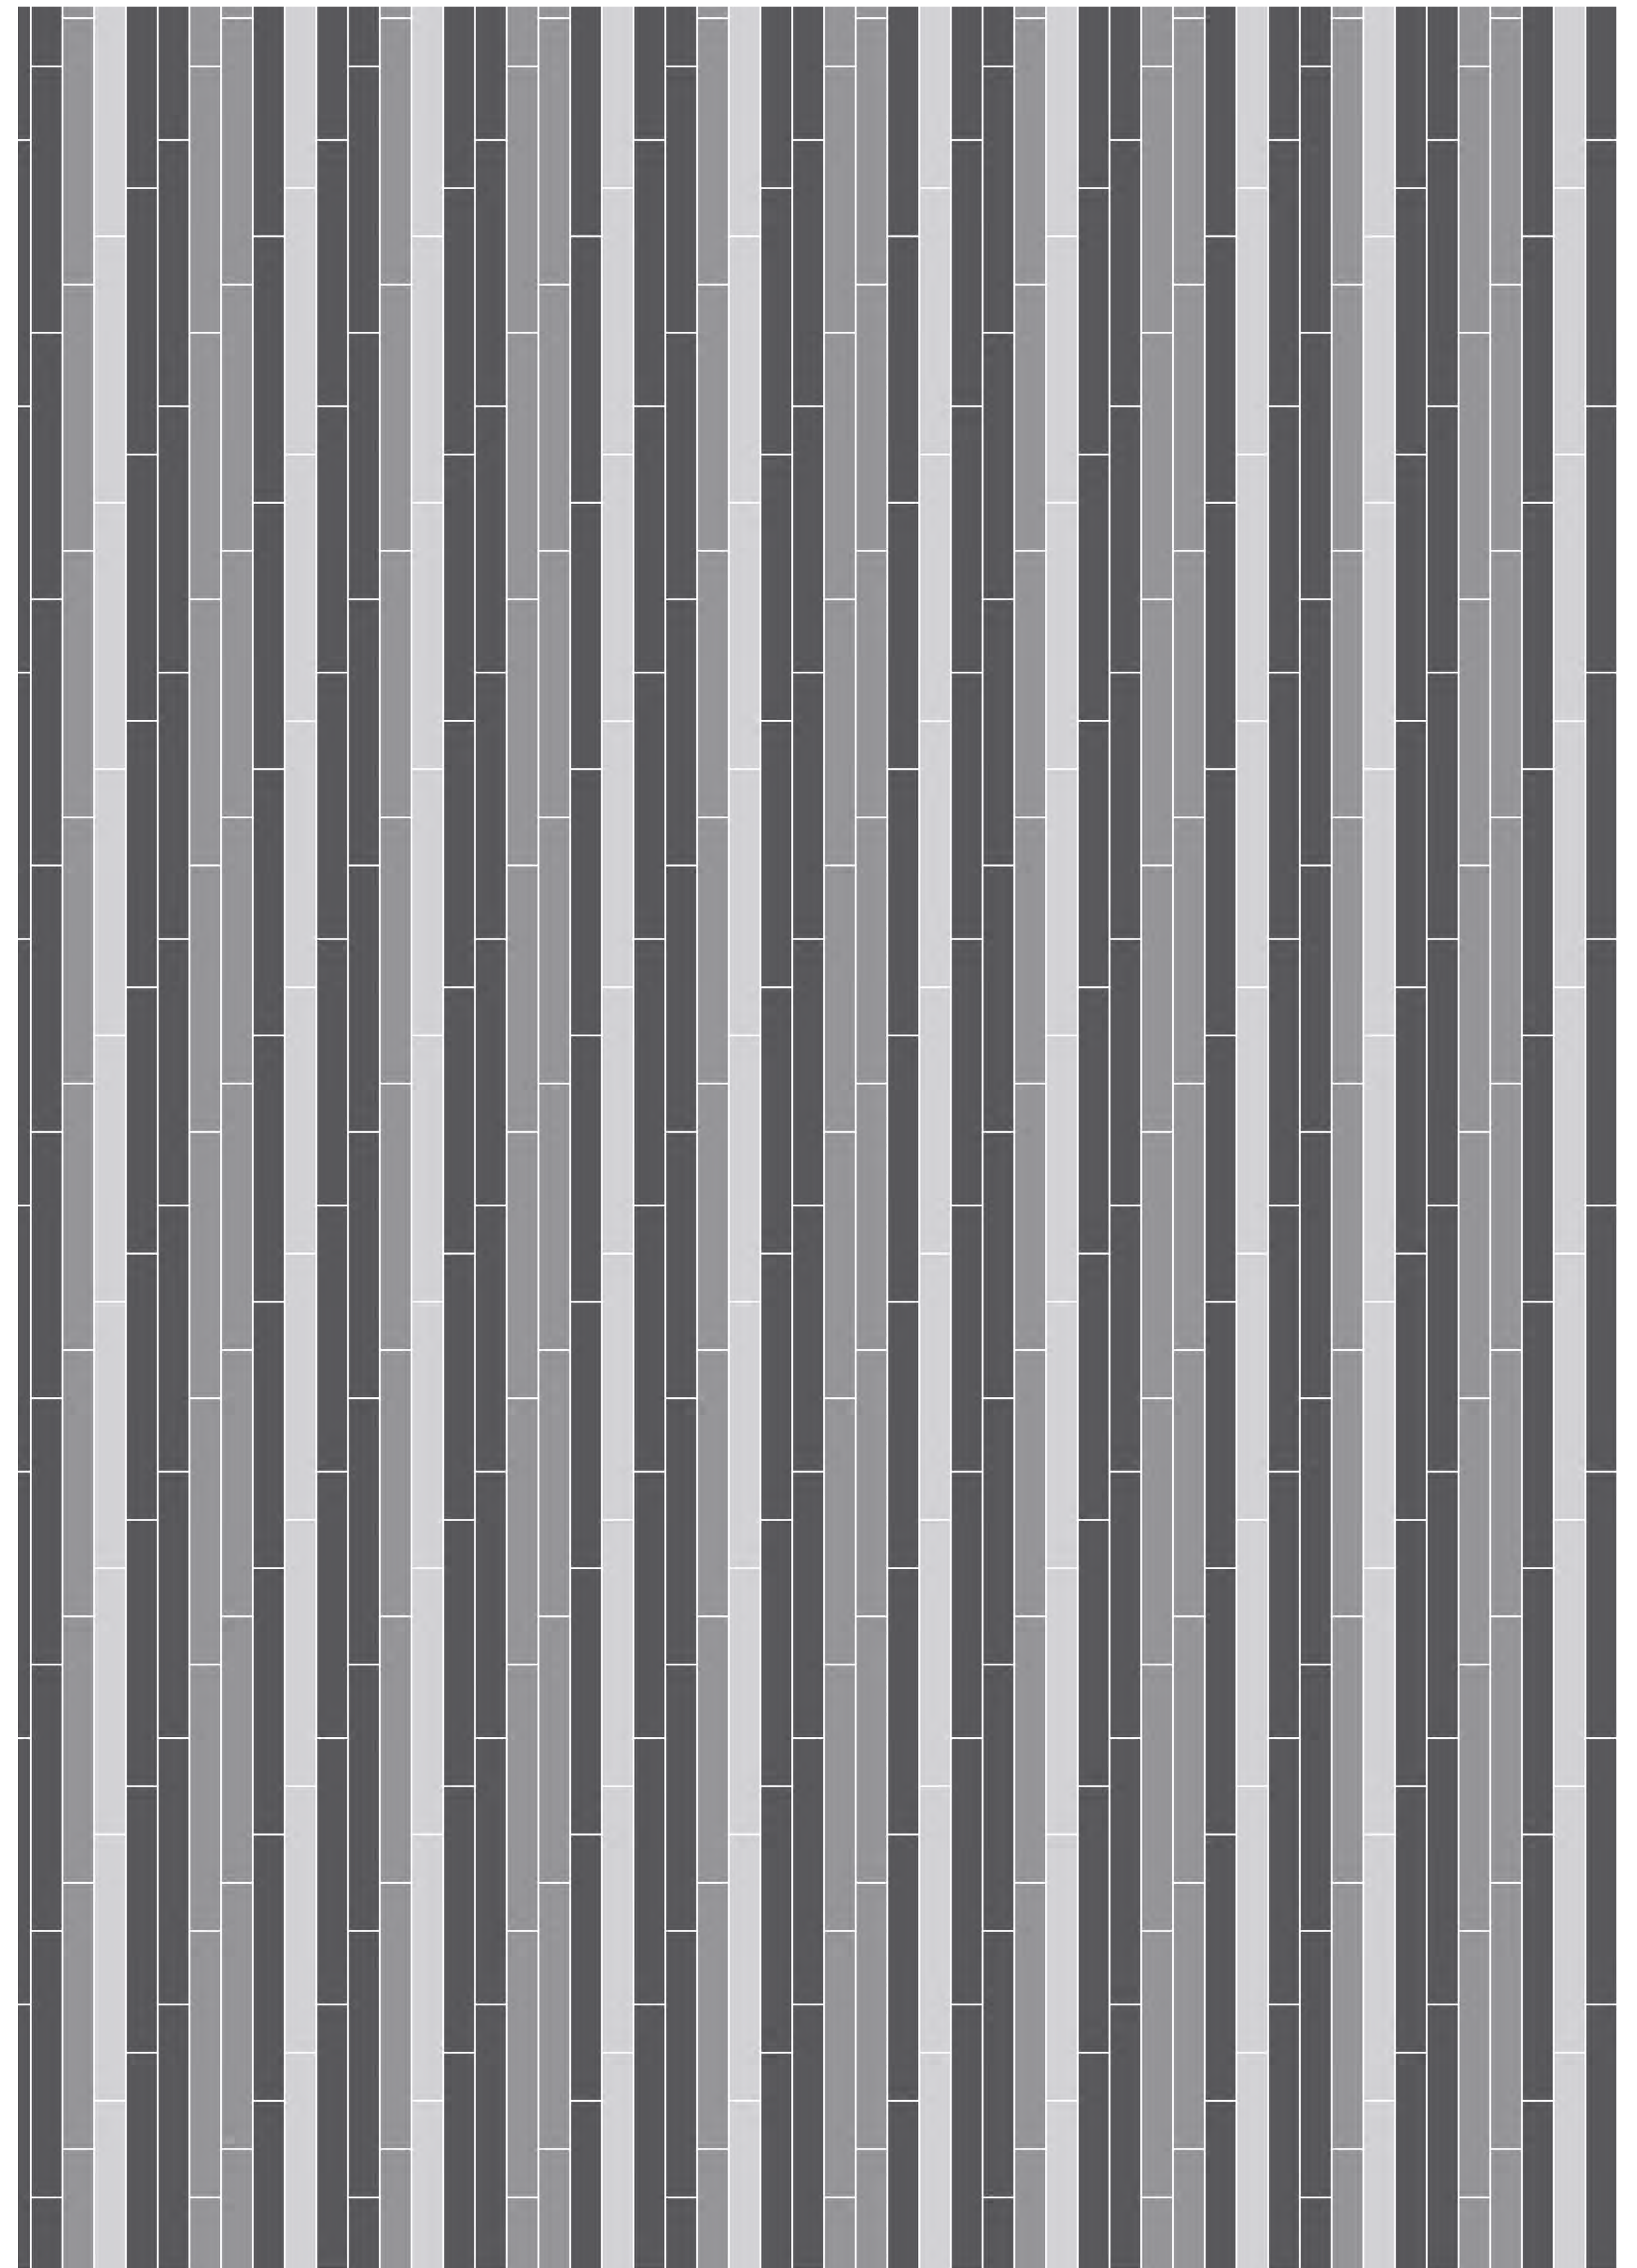


Installation 05

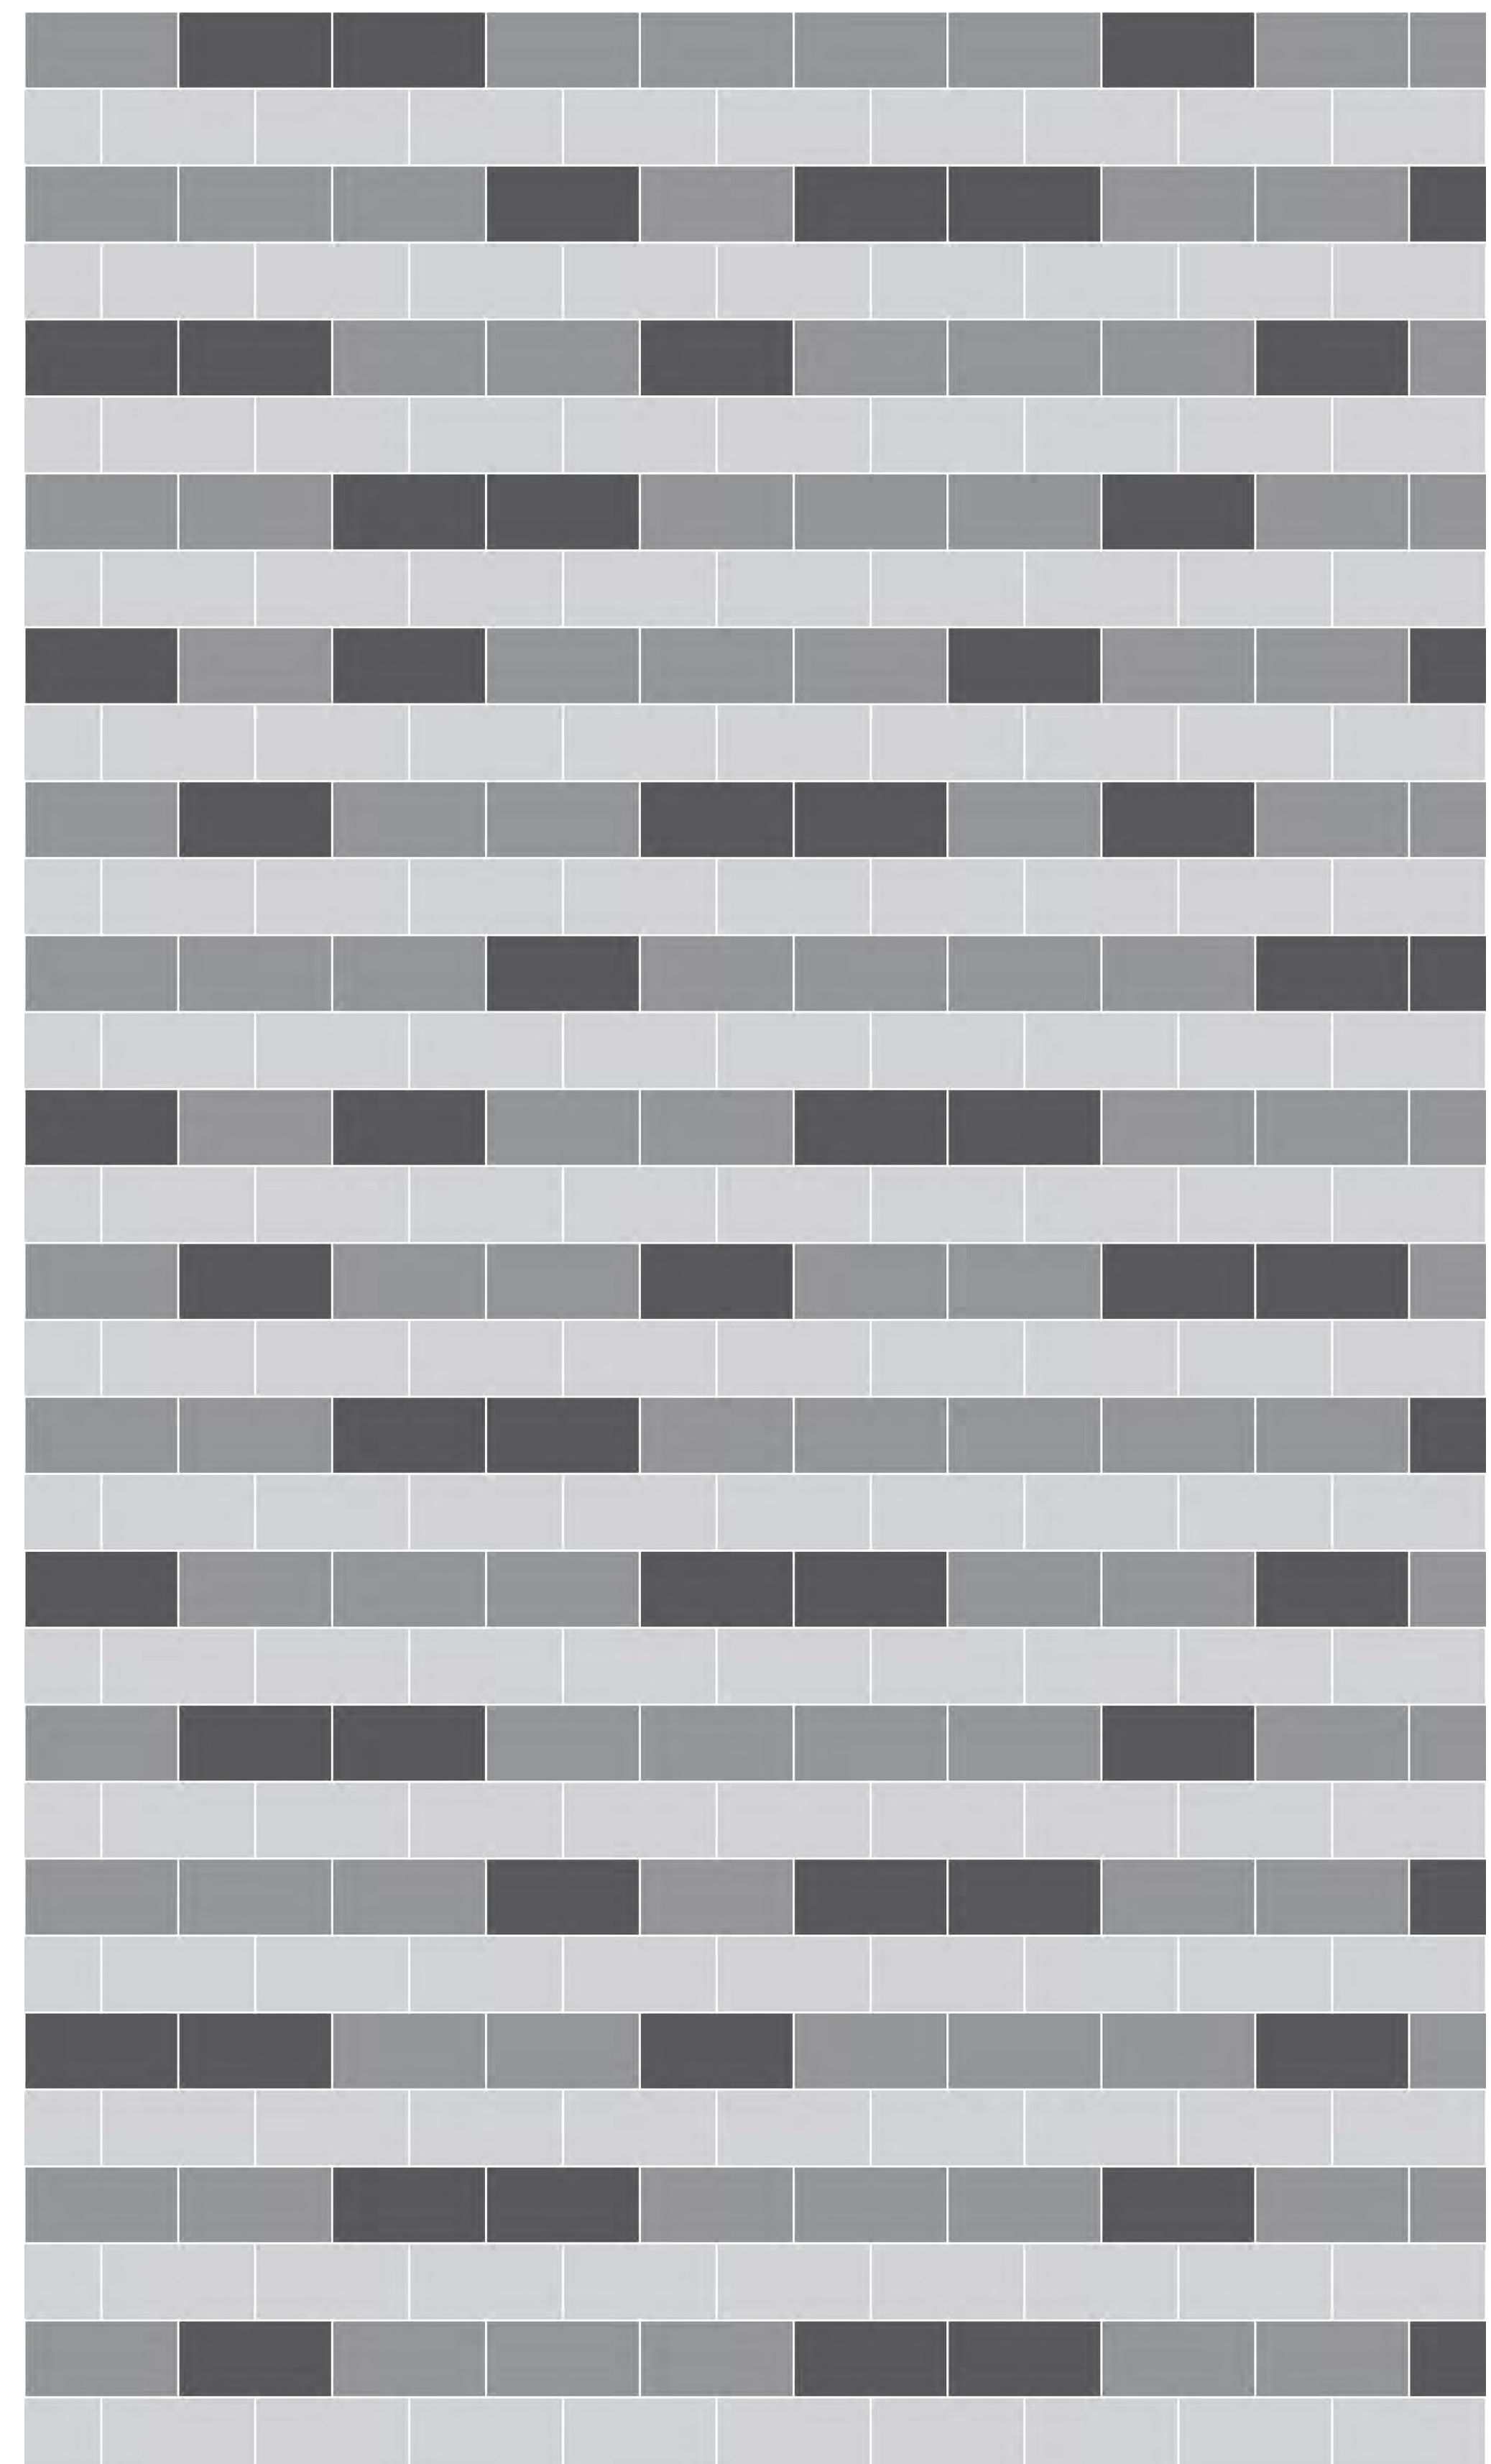


- Basis Rigid Mineral Core (4339V) in Matrix (39585)
- Basis Rigid Mineral Core (4339V) in Elaborate (39504)
- Basis Rigid Mineral Core (4339V) in Intrinsic (39520)

Installation 06

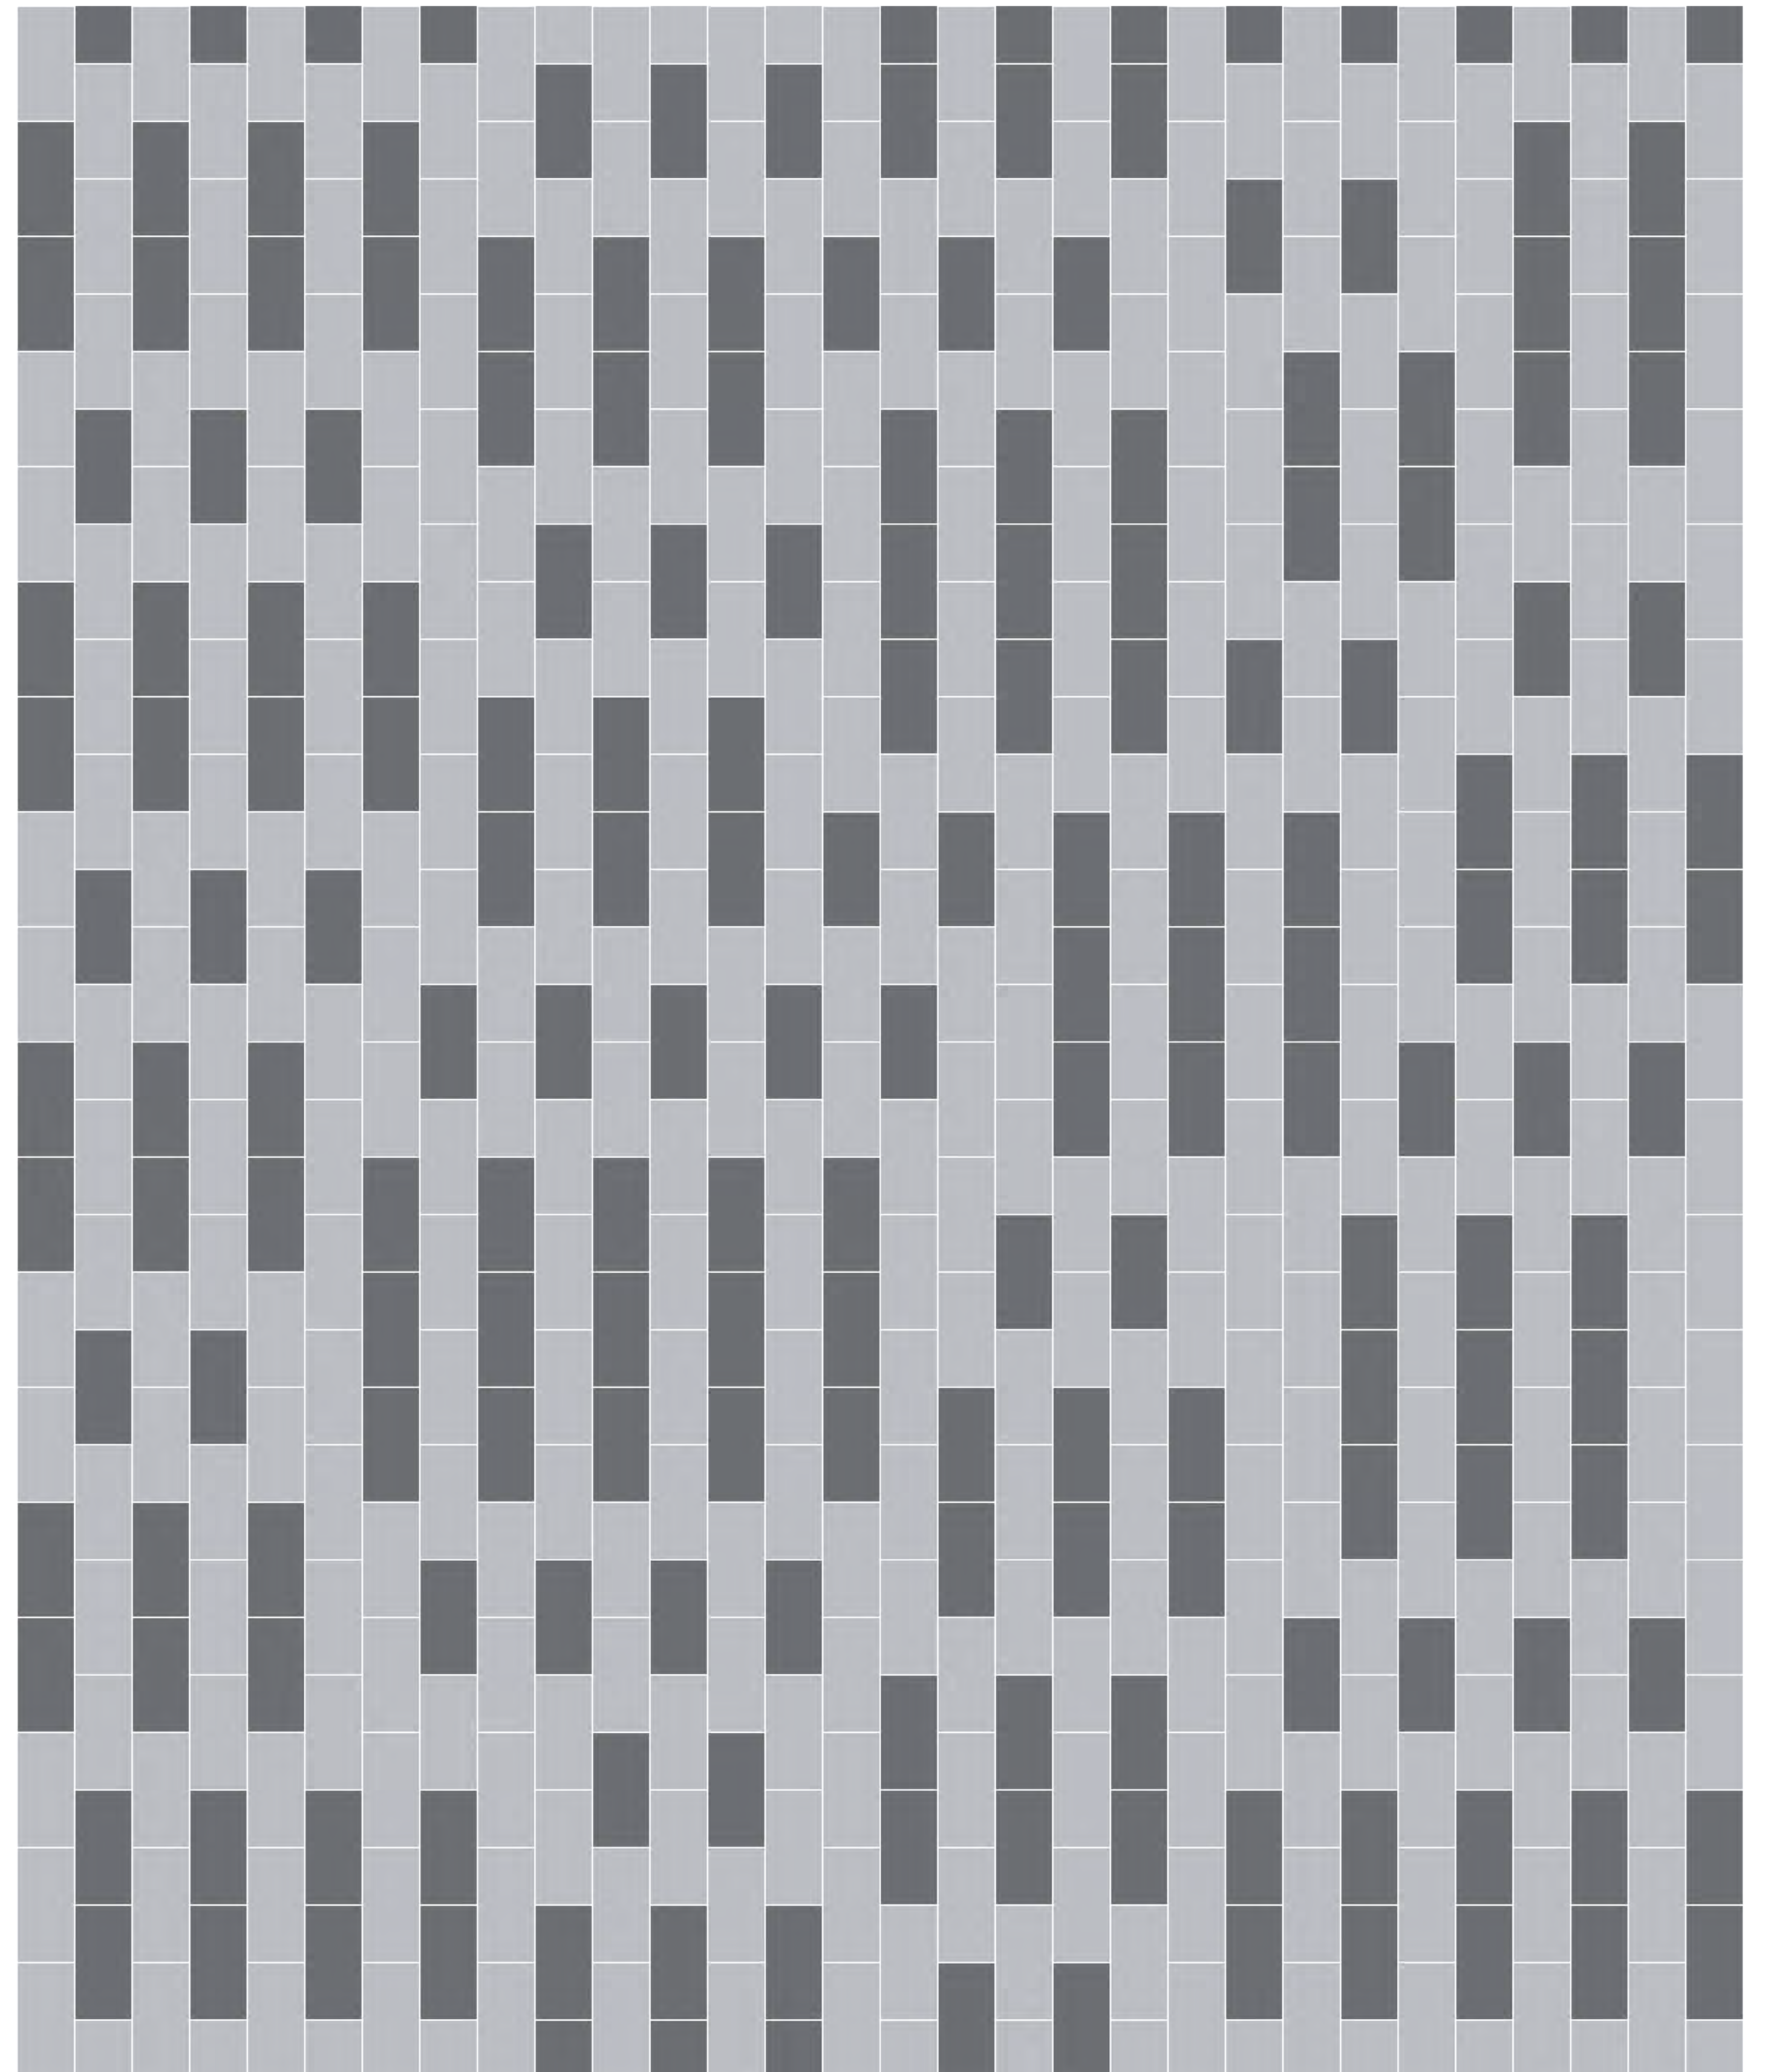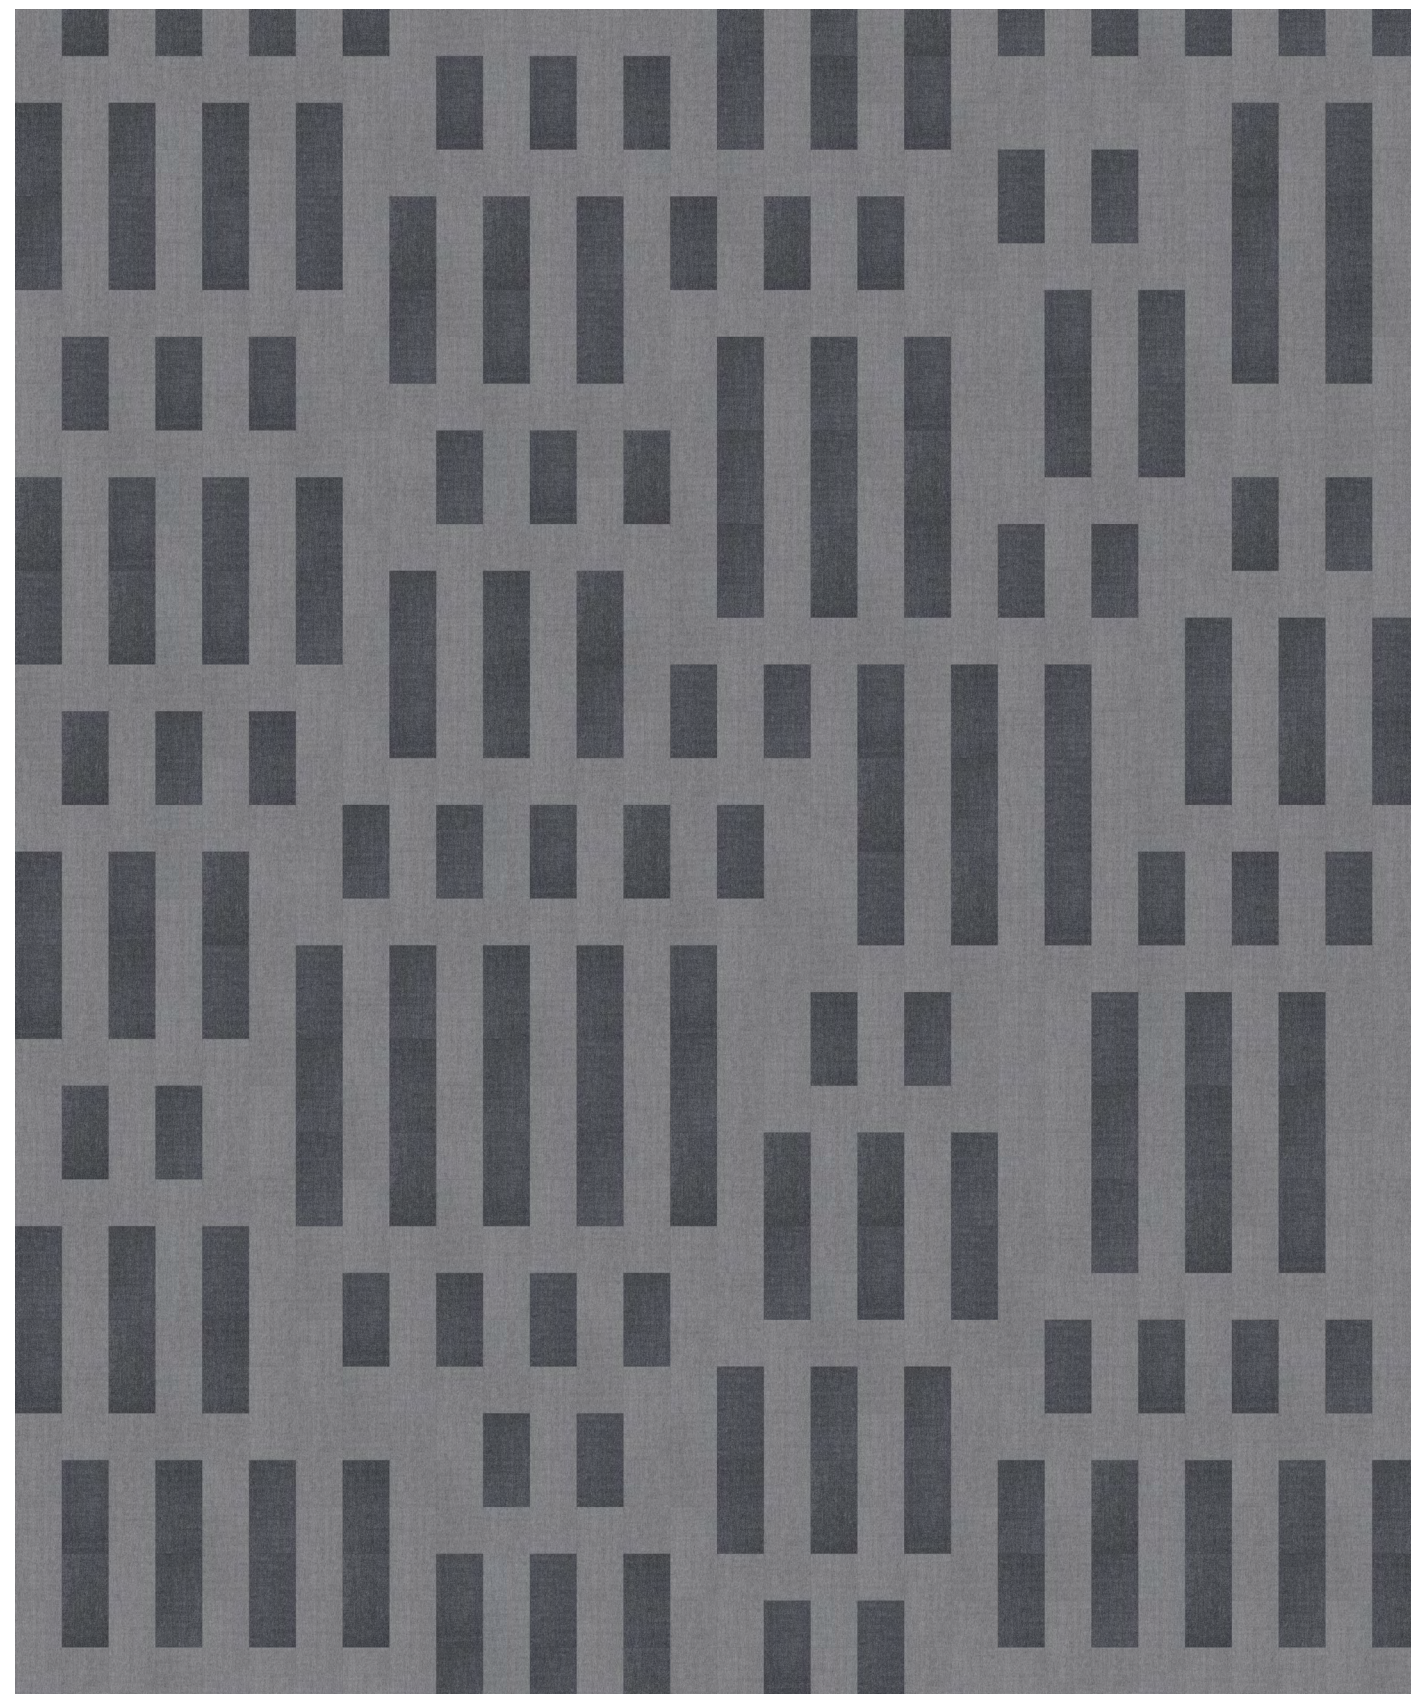

- Basis Rigid Mineral Core (4339V) in Source (39595)
- Basis Rigid Mineral Core (4339V) in Actualize (39535)

Installation 07

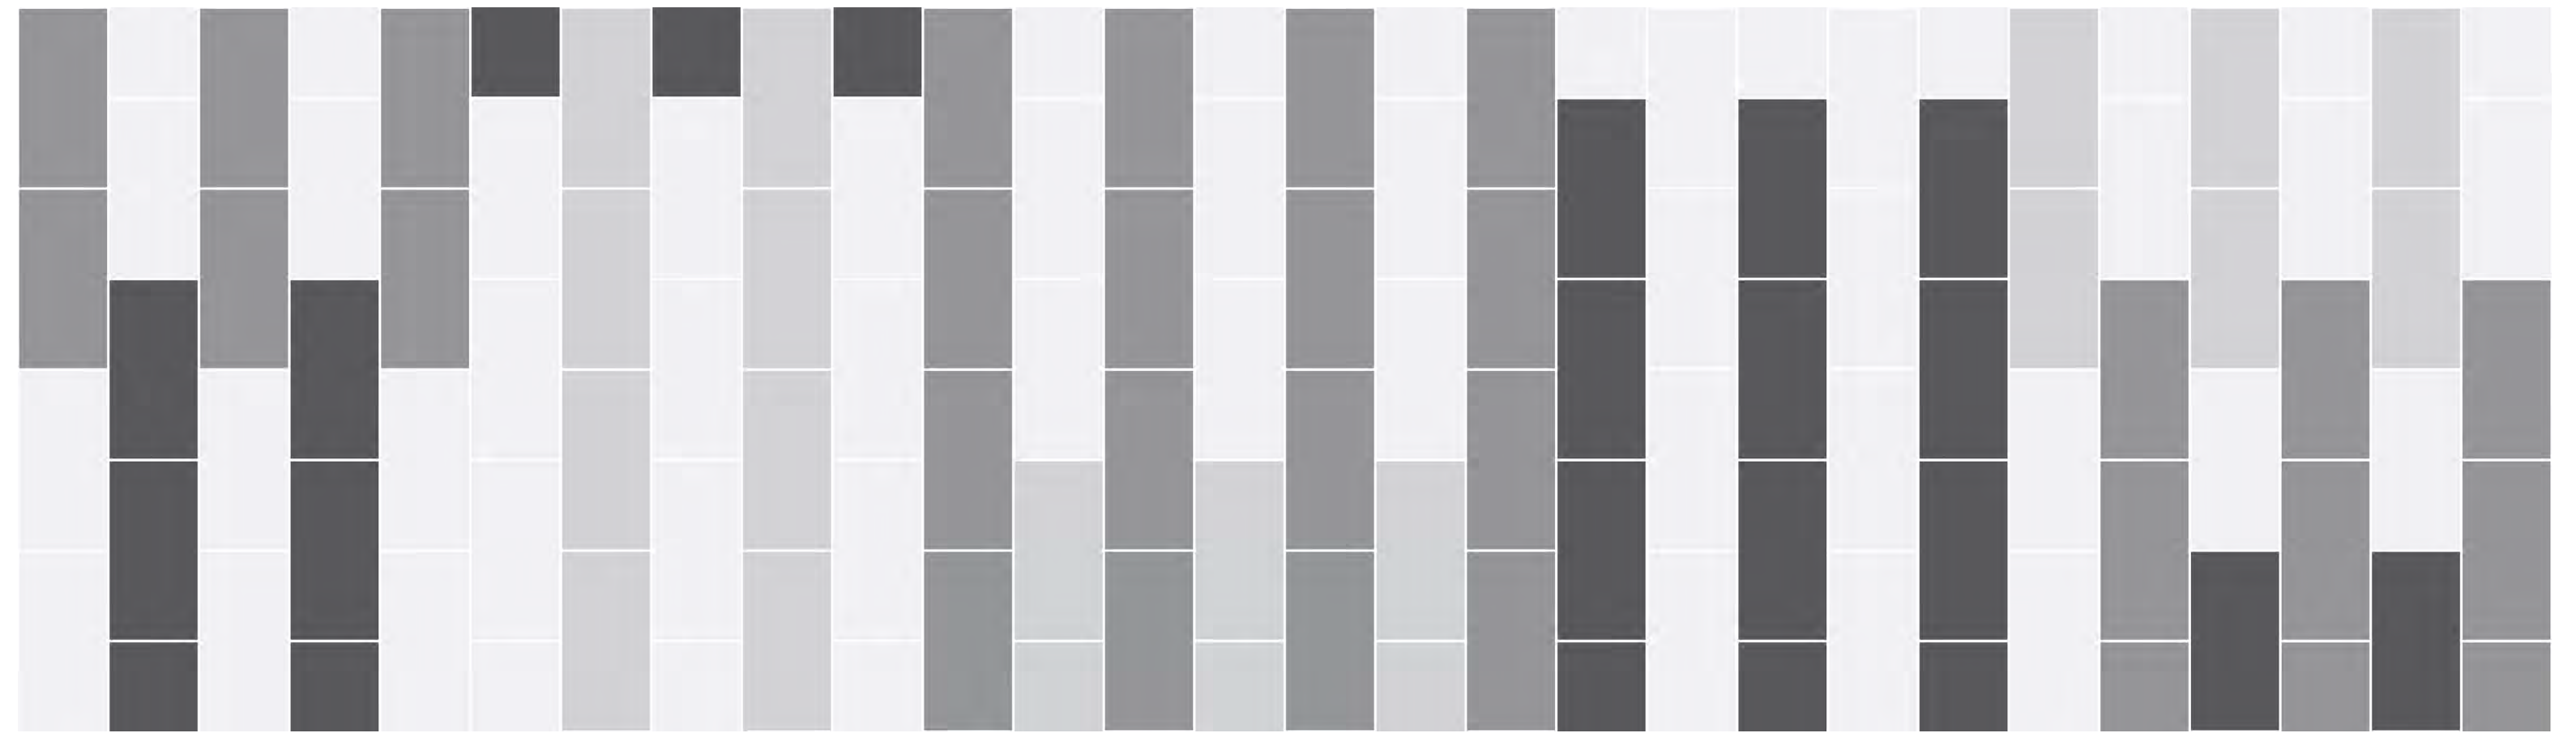

- Basis Rigid Mineral Core (4339V) in Source (39595)
- Basis Rigid Mineral Core (4339V) in Configuration (39530)
- Basis Rigid Mineral Core (4339V) in Actualize (39535)
- Basis Rigid Mineral Core (4339V) in Formation (39155)