

# Branching Out Installation Ideas




Installation 01



Installation 02



Installation 03

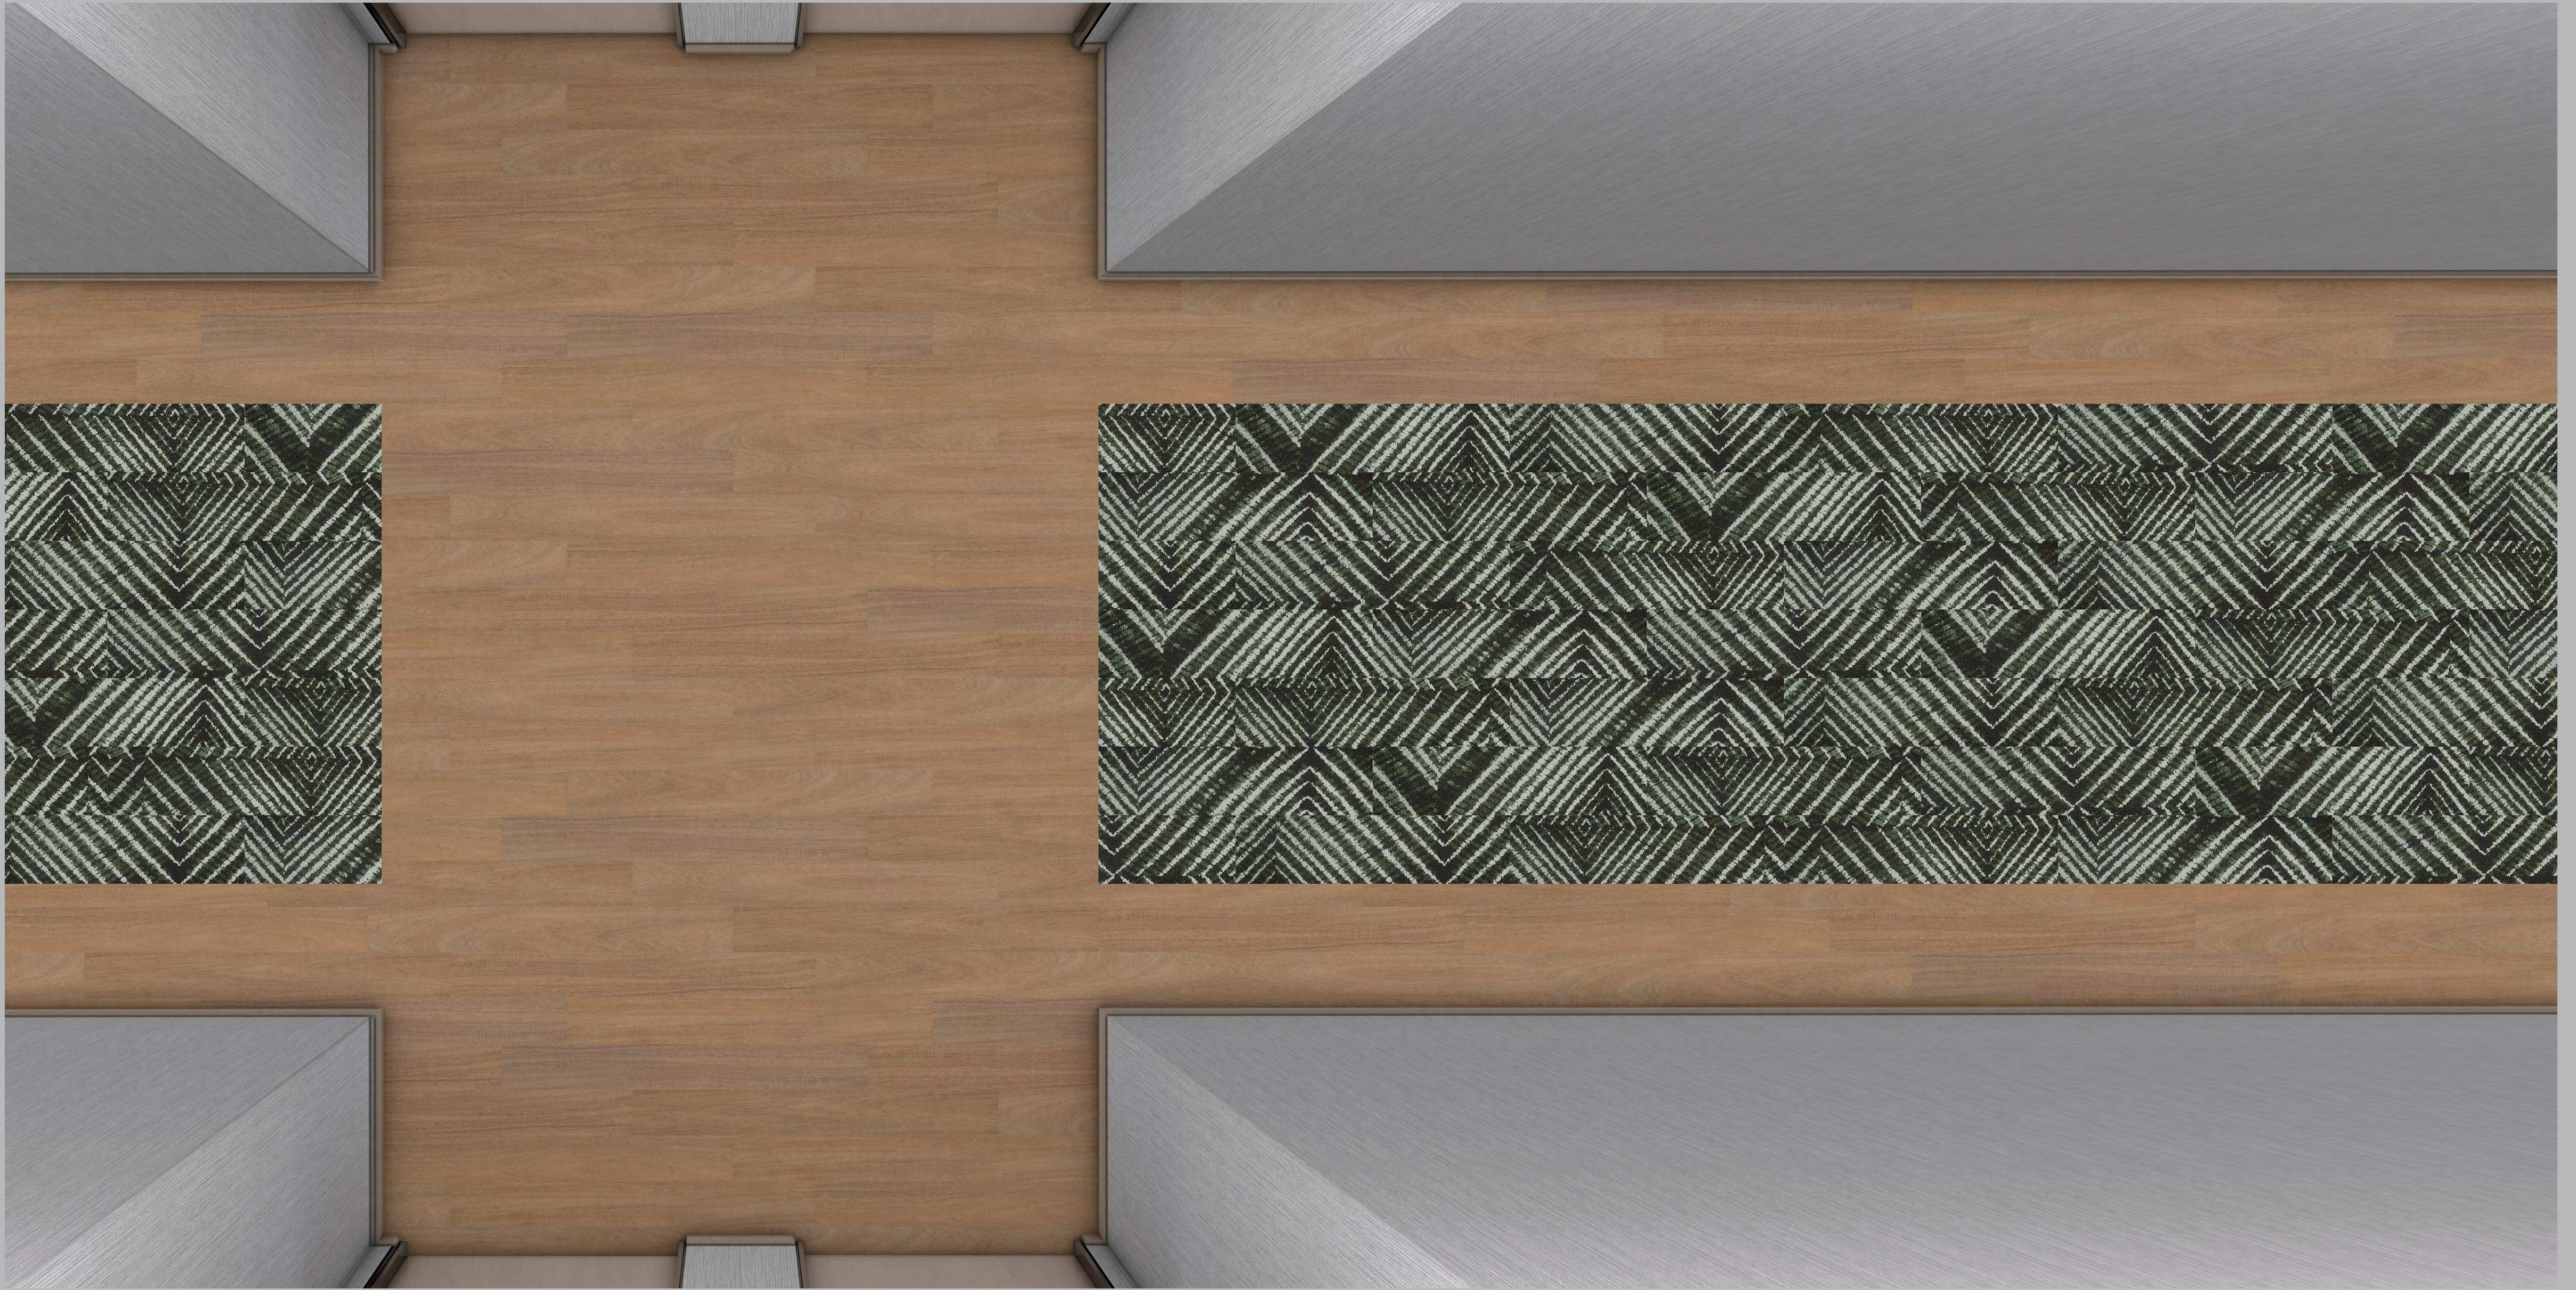

Installation 04


# Branching Out Installation Keys

# Installation 01



■ Branching Out 5mm Acoustic (LVT 4256V) in Traverse Oak (56760)

■ Branching Out 5mm Acoustic (LVT 4256V) in Smoky Oak (56516)

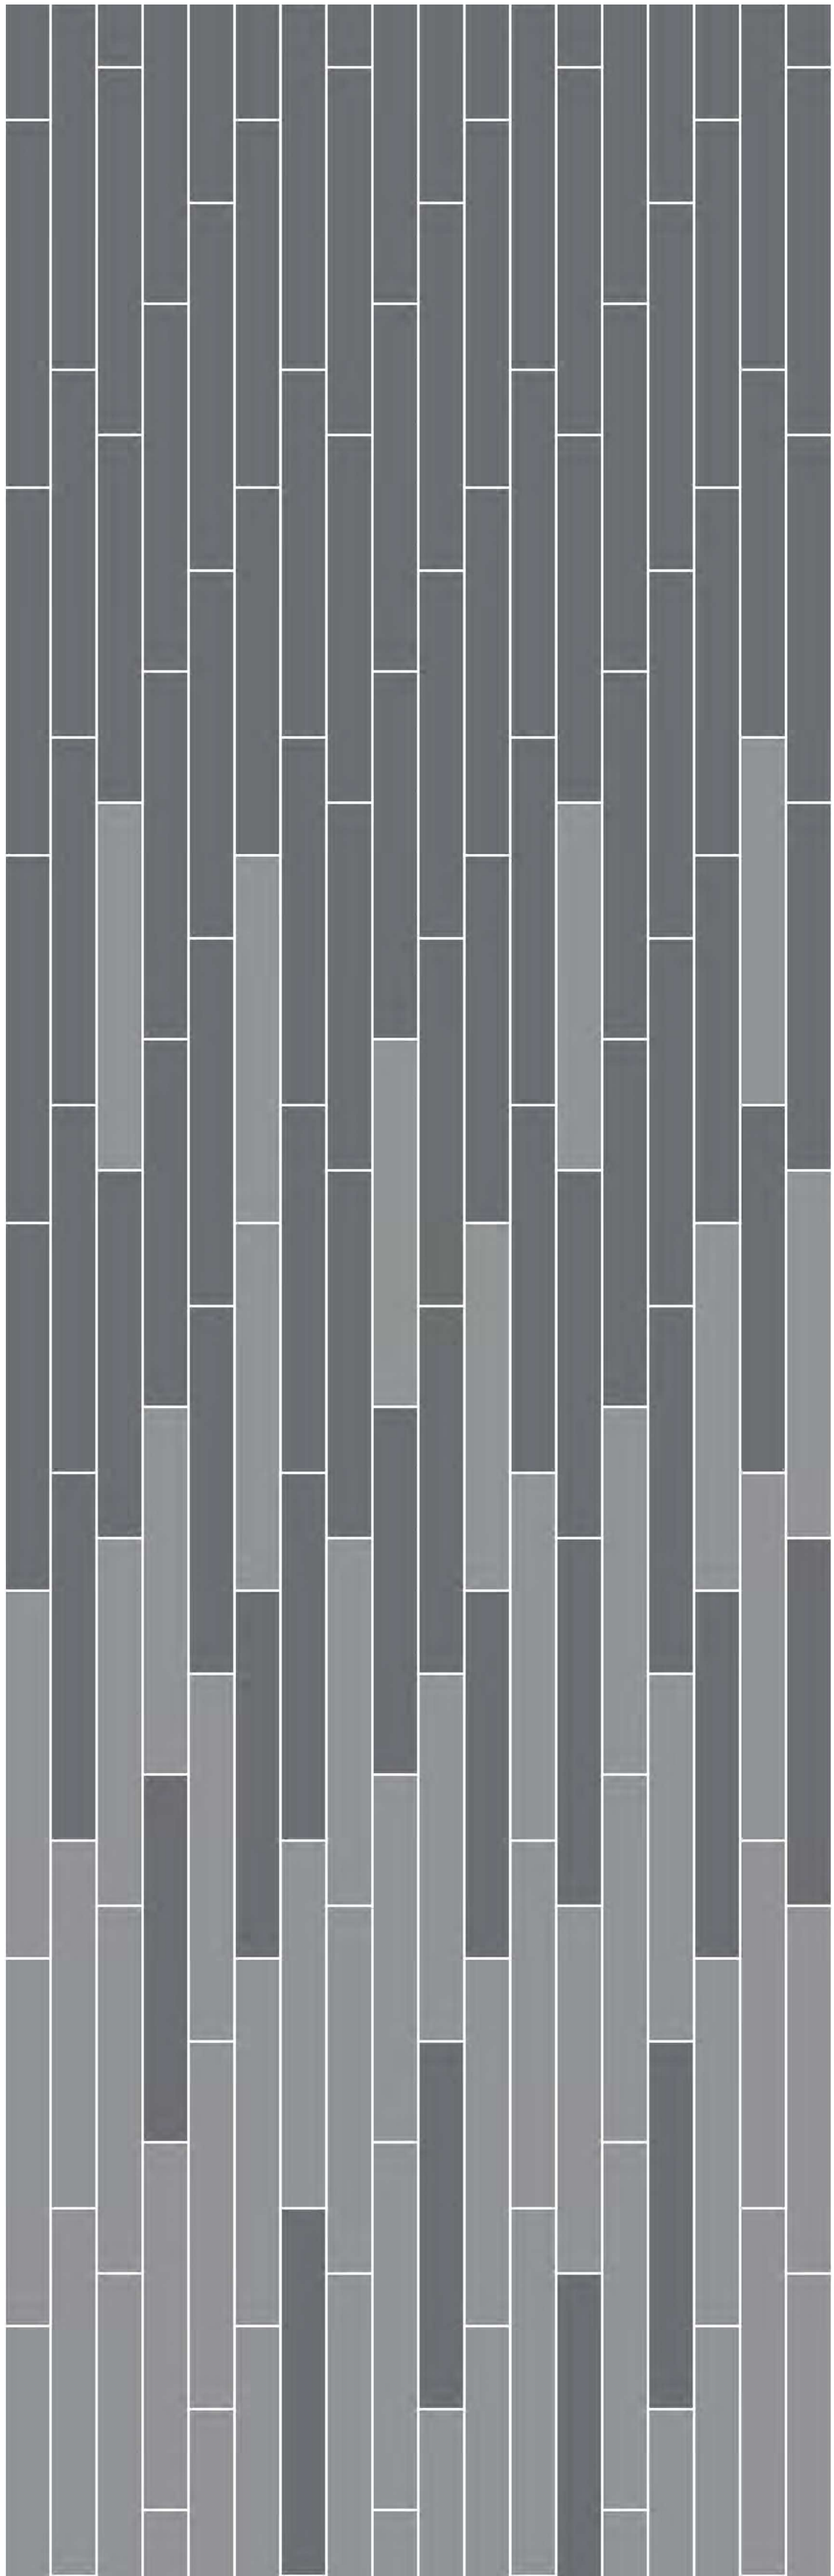

# Installation 02





■ Branching Out 12mil (COREtec 4308V) in Zion Oak (56103)

■ Branching Out 12mil (COREtec 4308V) in Plains Oak (56250)

■ Branching Out 12mil (COREtec 4308V) in Rise Oak (56120)




# Installation 03

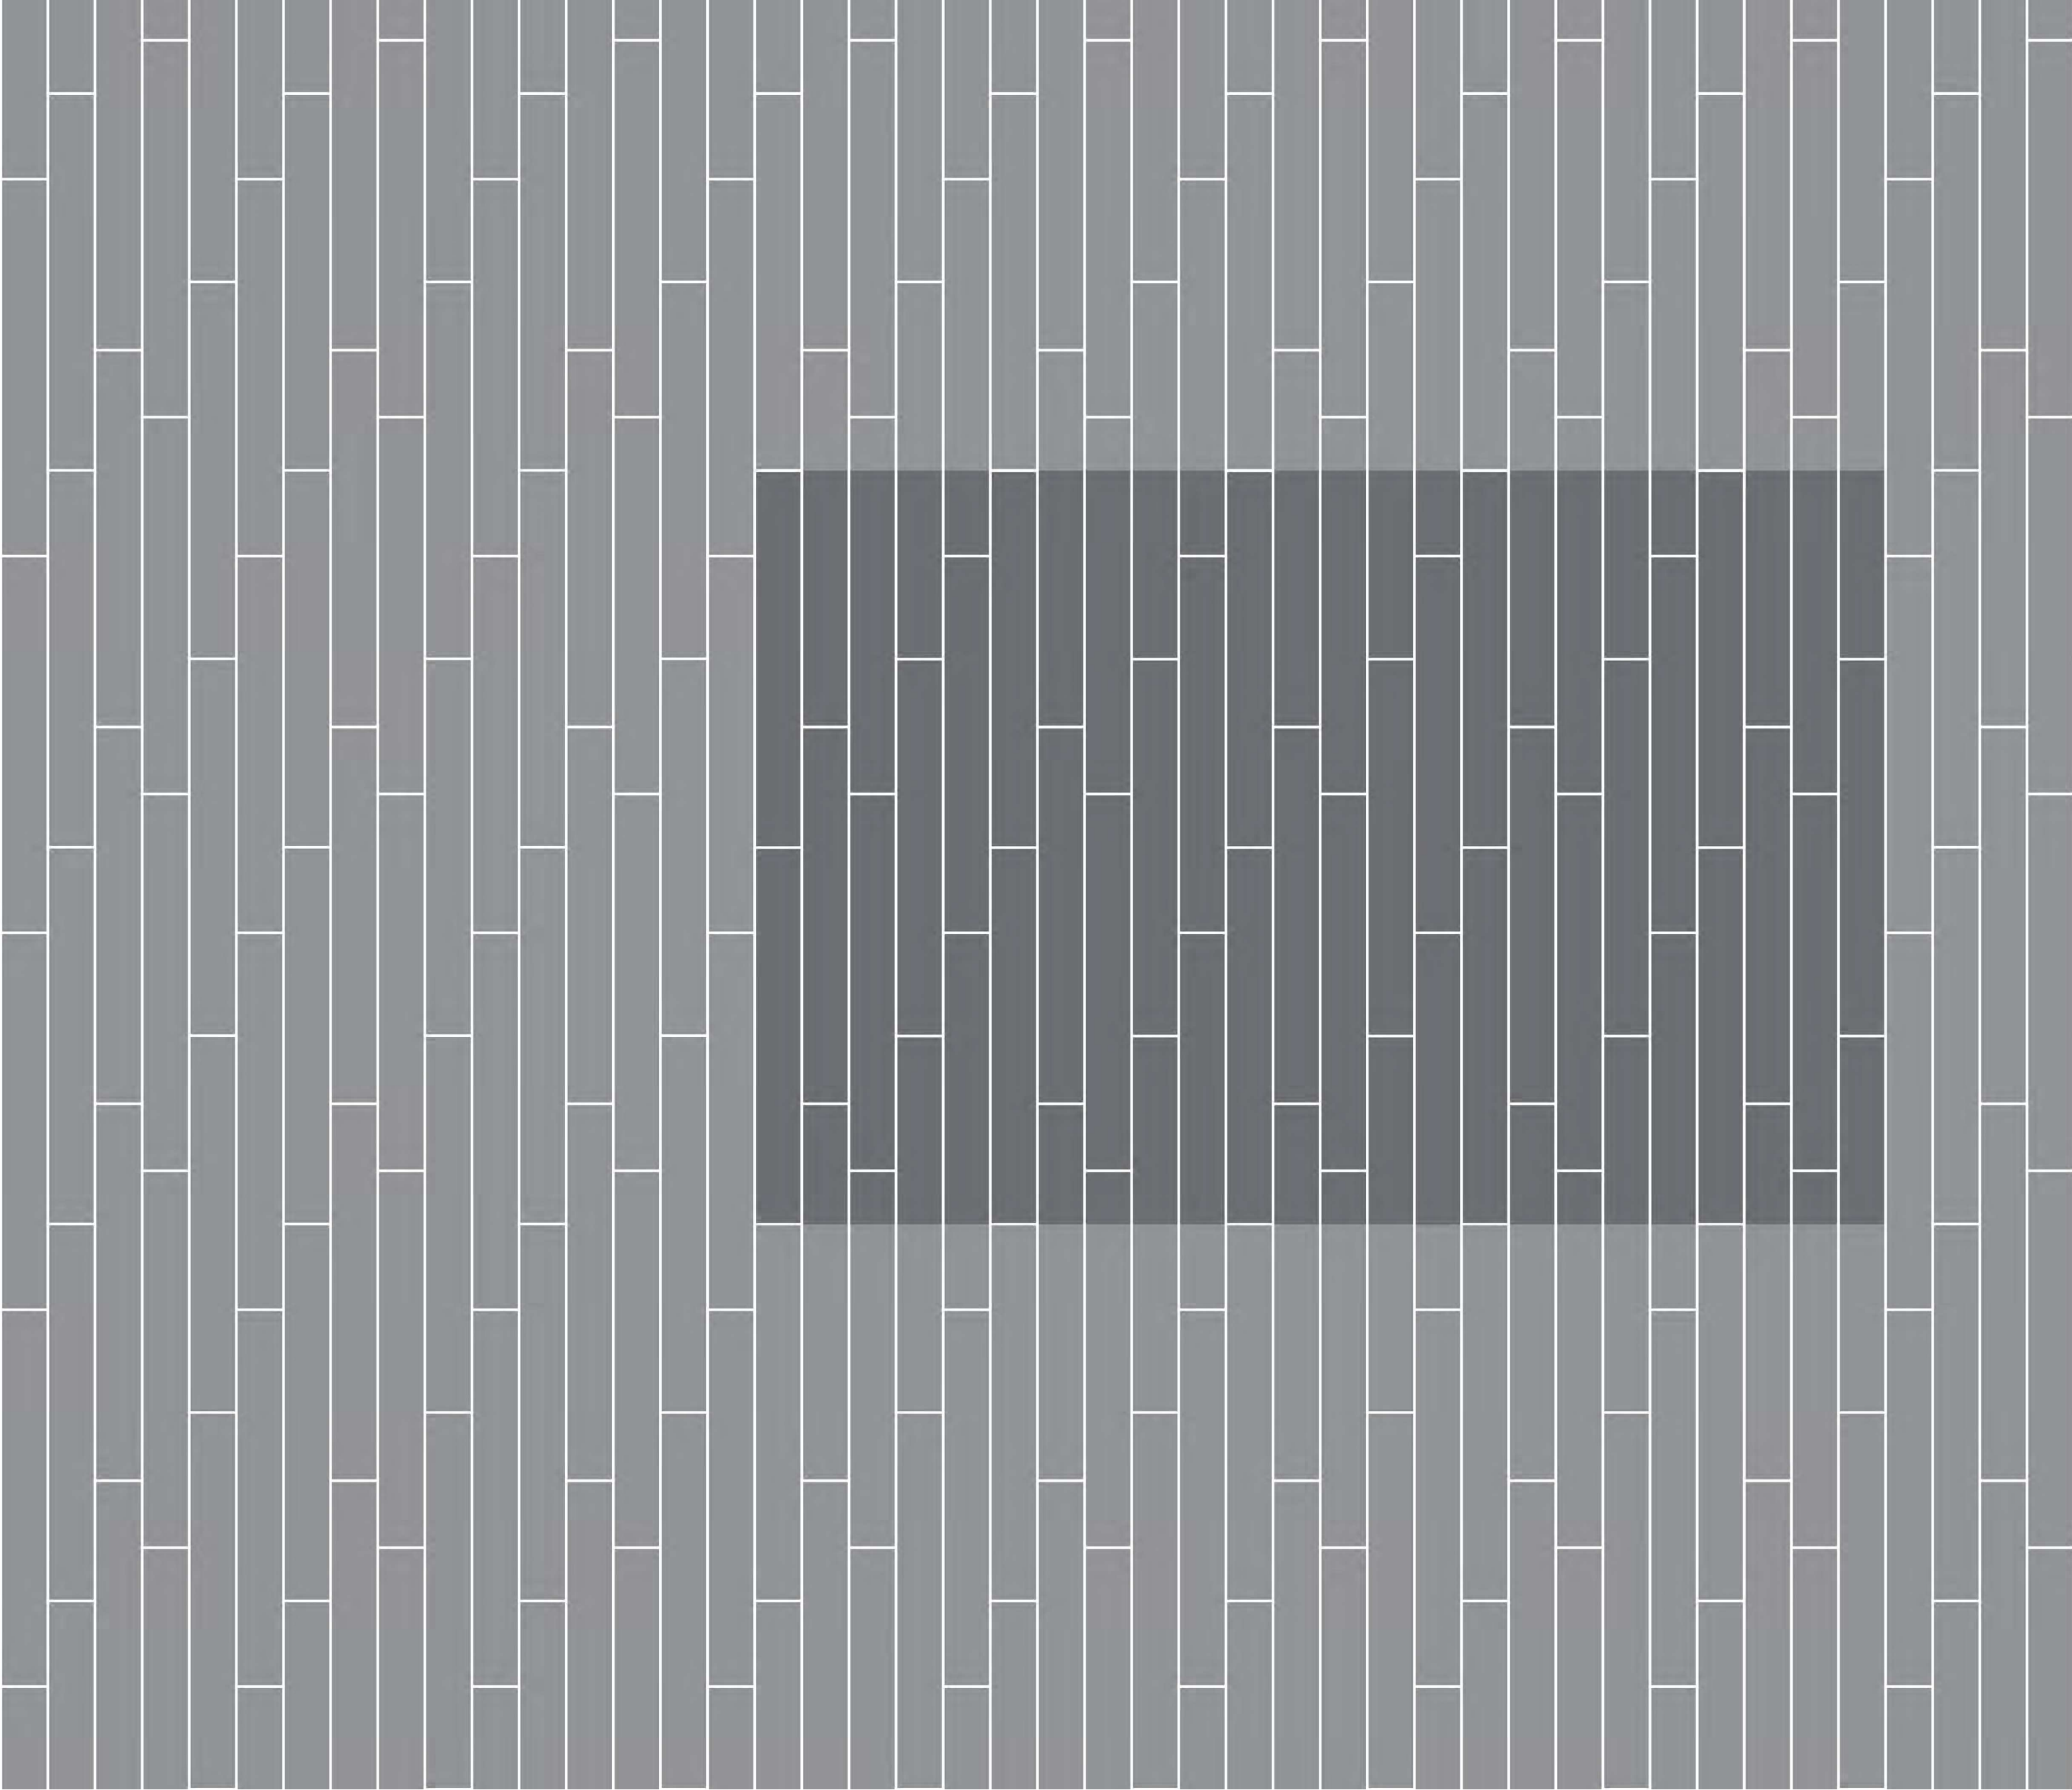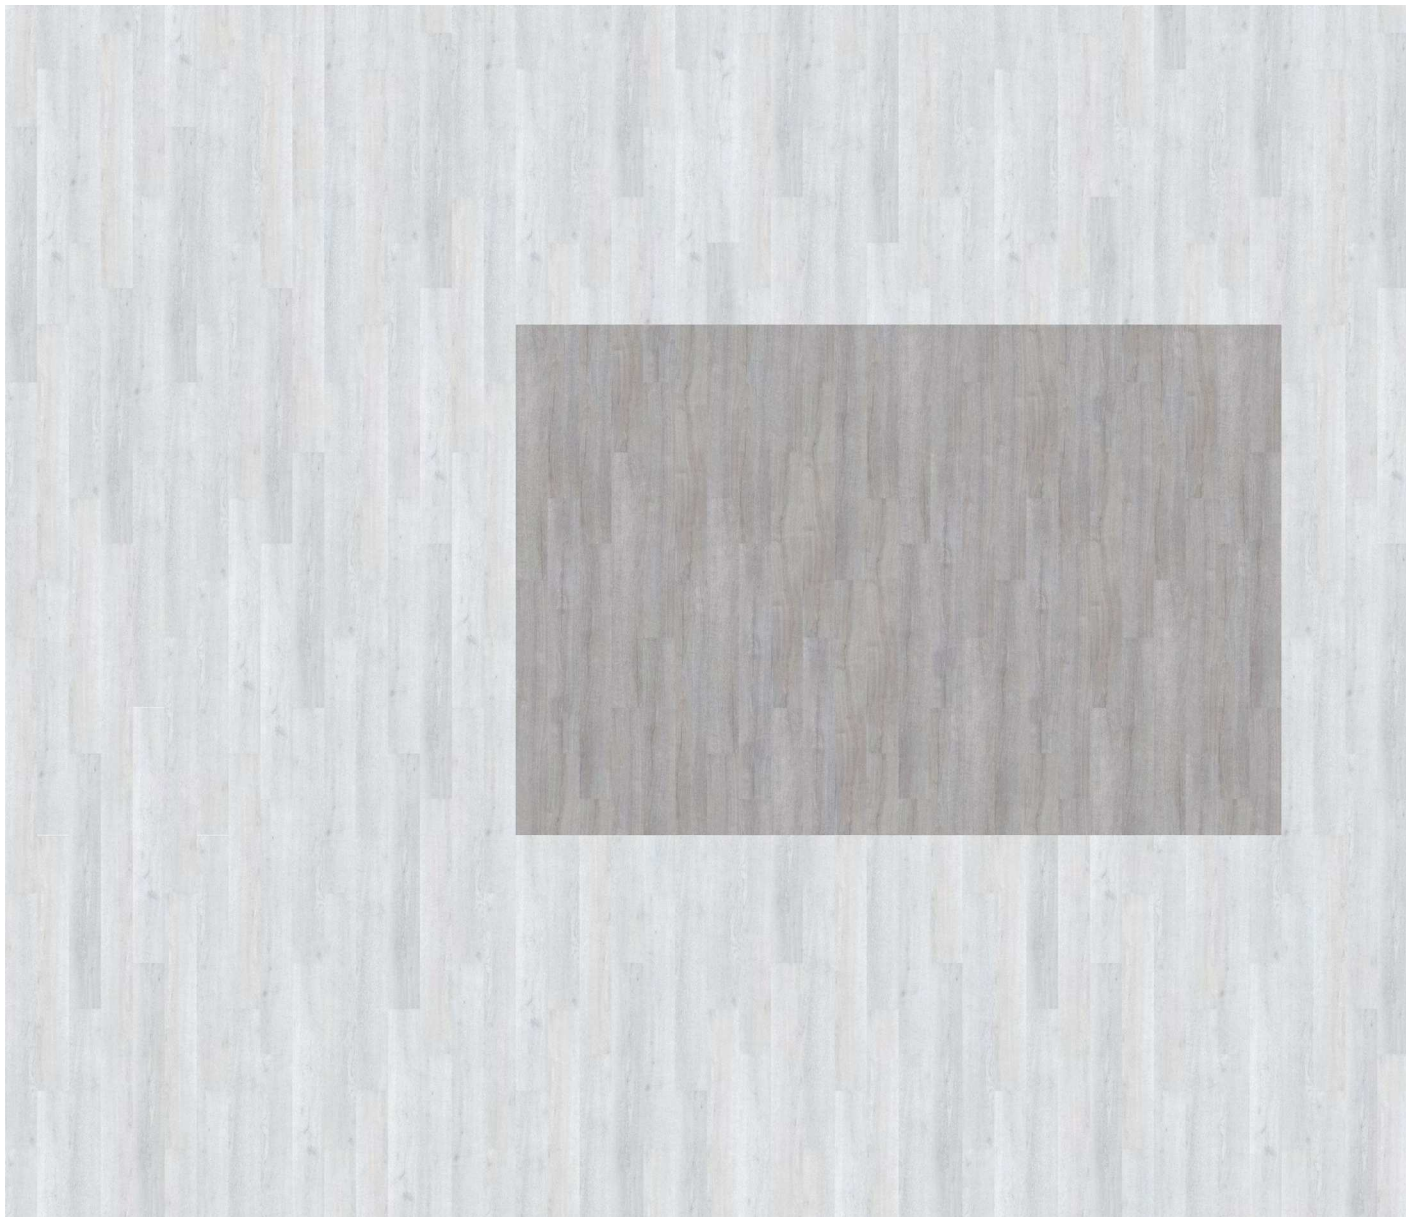

■ Branching Out 20mil (COREtec 4309V) in Range Oak (56506)

■ Branching Out 20mil (COREtec 4309V) in Alpine Oak (56100)

# Installation 04

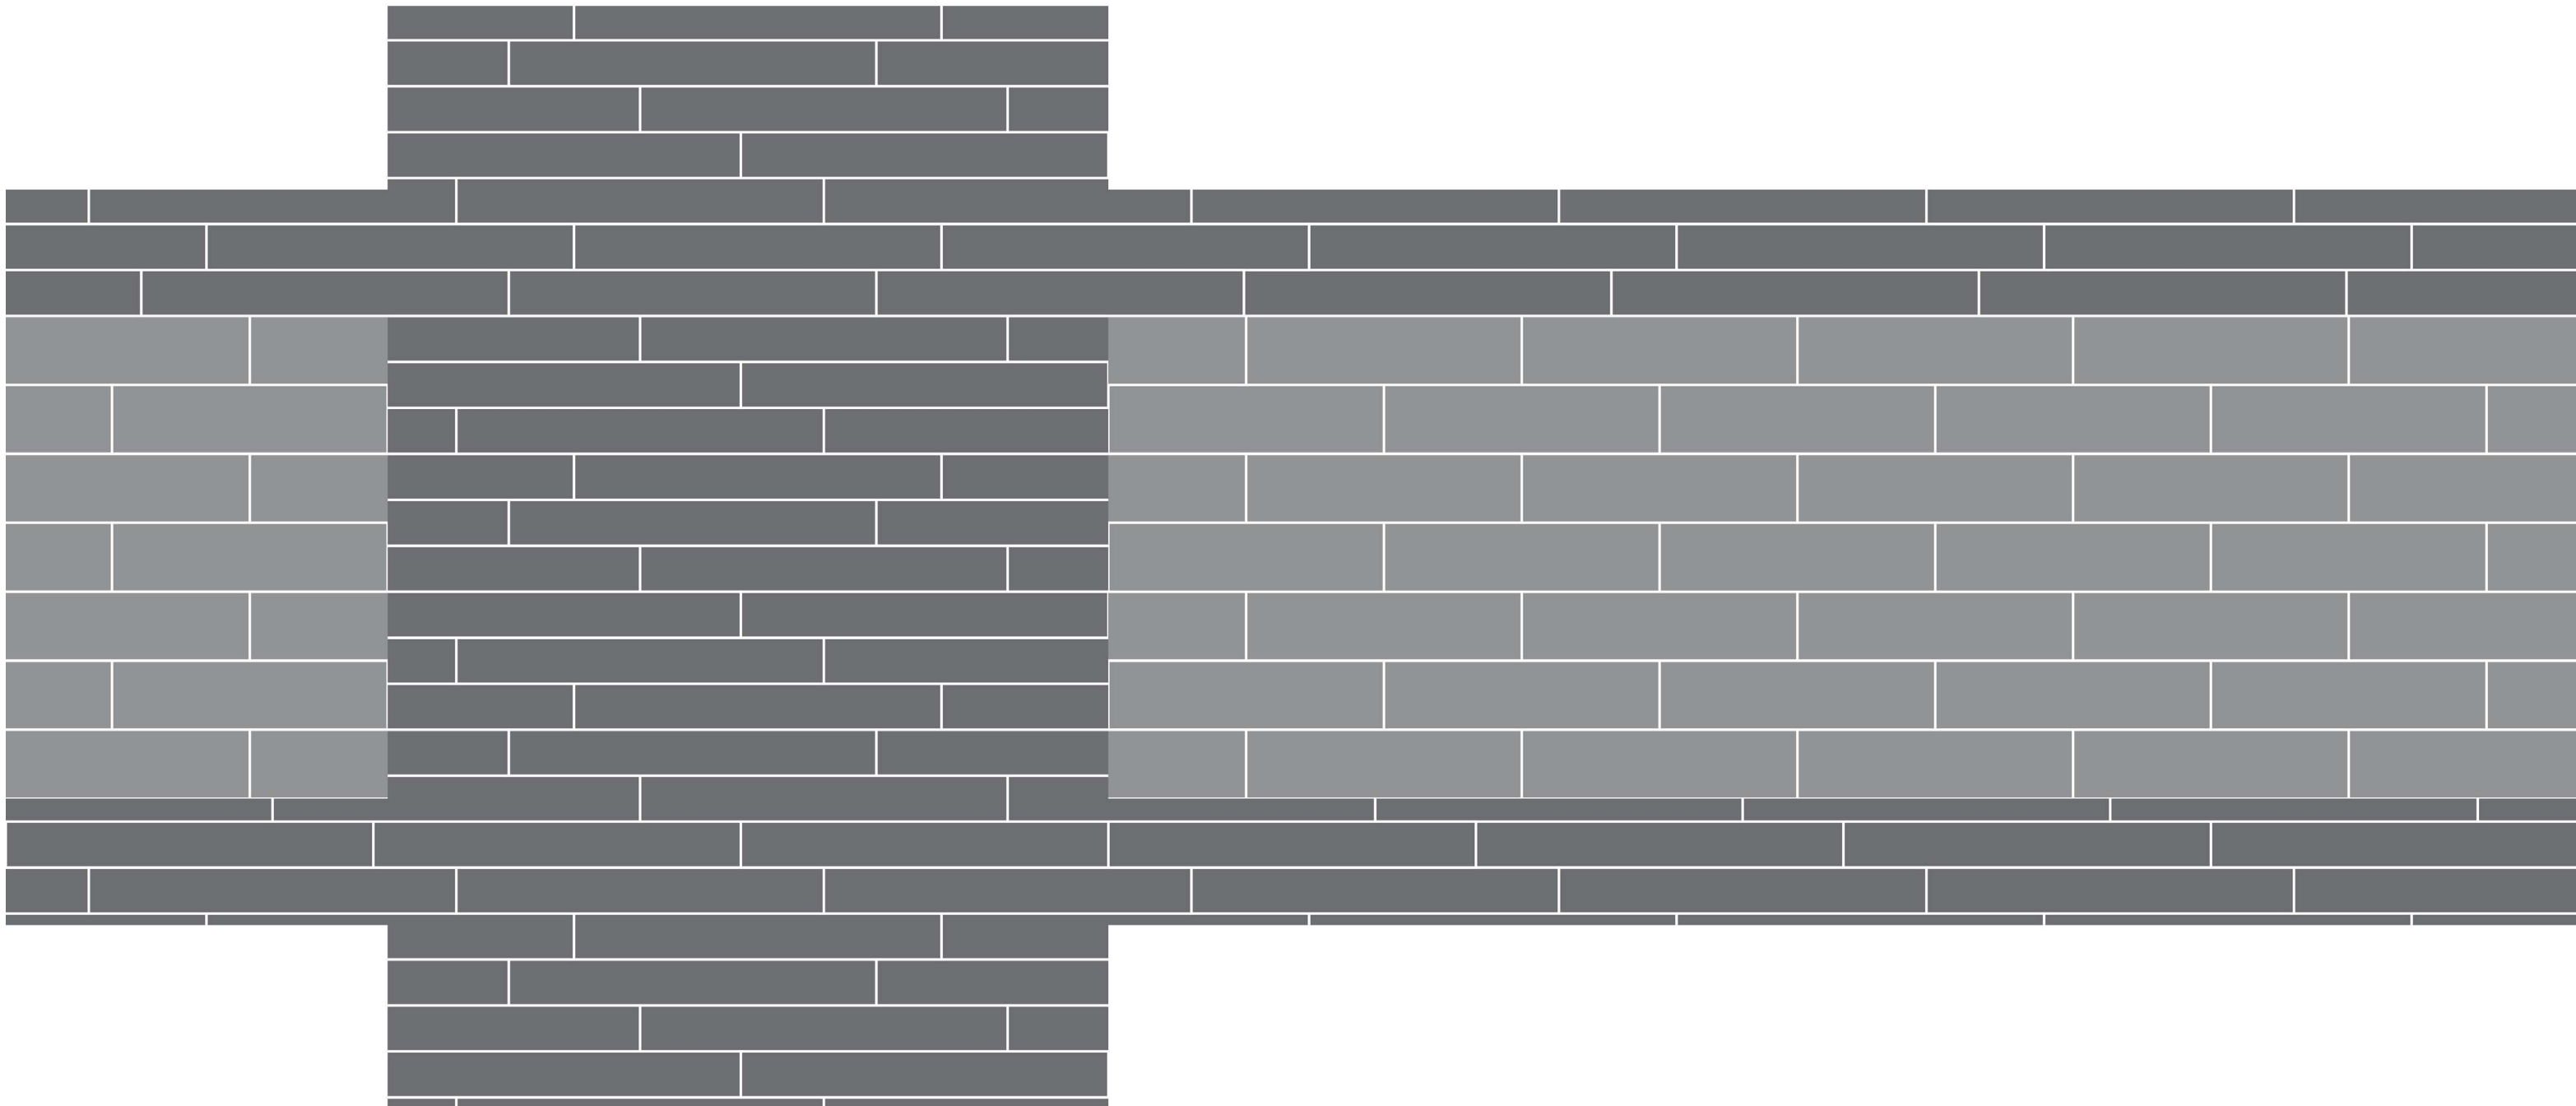

■ Branching Out 5mm (LVT 4480V) in Zion Oak (56103)

■ Identity Carpet Tile (5T237) in Ivy (35375)